

Flygt 3153

Table of Contents

1	Introduction and Safety.....	3
1.1	Introduction.....	3
1.2	Safety terminology and symbols.....	3
1.3	User safety.....	4
1.4	Ex-approved products.....	4
1.5	Special hazards.....	5
1.5.1	Biological hazards.....	5
1.5.2	Wash the skin and eyes.....	6
1.6	Protecting the environment.....	6
1.7	End-of-life product disposal.....	6
1.8	Spare parts.....	6
1.9	Warranty.....	6
2	Transportation and Storage.....	7
2.1	Examine the delivery.....	7
2.1.1	Examine the package.....	7
2.1.2	Examine the unit.....	7
2.2	Transportation guidelines.....	7
2.2.1	Precautions.....	7
2.2.2	Lifting.....	7
2.3	Temperature ranges for transportation, handling and storage.....	8
2.4	Storage guidelines.....	8
3	Product Description.....	10
3.1	Products included.....	10
3.2	Pump design.....	10
3.3	Monitoring equipment.....	12
3.4	The data plate.....	13
3.5	The warm liquid data plate.....	14
3.6	Motor regulation.....	14
3.7	Approvals.....	14
3.8	Product denomination.....	17
4	Installation.....	18
4.1	Precautions.....	18
4.1.1	Hazardous atmospheres.....	18
4.2	Install with P-installation.....	19
4.3	Install with S-installation.....	20
4.4	Install with Z-installation.....	21
4.5	Install with T-installation.....	22
4.6	Install with the stand.....	23
4.6.1	Find the height setting from the inlet (X).....	24
4.6.2	Find the height setting from the outlet (Y).....	24
4.6.3	Read the height setting from the table.....	24
4.6.4	Assemble the stand.....	25
4.6.5	Install the anchor bolts.....	27
4.6.6	Attach the pump housing to the stand.....	27
4.6.7	Install the stand on the anchor bolts.....	28
4.6.8	Install the drive unit on the pump housing.....	30
4.6.9	Fasteners.....	31
4.6.10	Stand dimensional drawings.....	32

4.7 Make the electrical connections.....	32
4.7.1 General precautions.....	32
4.7.2 Grounding (earthing)	34
4.7.3 Prepare the SUBCAB™ cables.....	34
4.7.4 Connect the motor cable to the pump.....	35
4.7.5 Connect the cables to the starter and monitoring equipment.....	36
4.7.6 Cable charts.....	38
4.7.7 MiniCAS.....	43
4.7.8 MAS 801.....	45
4.7.9 MAS 711.....	49
4.8 T-installation: Bleed air before starting pump.....	50
4.9 Check the impeller rotation.....	50
5 Operation.....	52
5.1 Precautions.....	52
5.2 Estimate zinc anode replacement intervals.....	52
5.3 Start the pump.....	53
6 Maintenance.....	54
6.1 Precautions.....	54
6.2 Maintenance guidelines.....	54
6.3 Torque values.....	55
6.4 Change the coolant.....	55
6.4.1 Empty the coolant.....	56
6.4.2 Fill with coolant.....	58
6.5 Service the pump.....	59
6.5.1 Inspection.....	59
6.5.2 Overhaul.....	60
6.5.3 Service in case of alarm.....	60
6.6 Replace the impeller.....	61
6.6.1 Replace the impeller for wet installation.....	61
6.6.2 Replace the impeller for dry installation.....	69
6.7 Pumps with MAS 801: Replace the PEM.....	77
7 Troubleshooting.....	79
7.1 Electrical troubleshooting.....	79
7.2 The pump does not start.....	79
7.3 The pump does not stop when a level sensor is used.....	80
7.4 The pump starts-stops-starts in rapid sequence.....	81
7.5 The pump runs but the motor protection trips.....	81
7.6 The pump delivers too little or no water.....	82
8 Technical Reference.....	83
8.1 Application limits.....	83
8.2 Motor data.....	83
8.3 Sensor characteristics.....	83
8.4 Wiring diagram: MiniCAS II.....	84

1 Introduction and Safety

1.1 Introduction

EN

Purpose of the manual

The purpose of this manual is to provide the necessary information for working with the unit. Read this manual carefully before starting work.

Read and keep the manual

Save this manual for future reference, and keep it readily available at the location of the unit.

Intended use



WARNING:

Operating, installing, or maintaining the unit in any way that is not covered in this manual could cause death, serious personal injury, or damage to the equipment and the surroundings. This includes any modification to the equipment or use of parts not provided by Xylem. If there is a question regarding the intended use of the equipment, please contact a Xylem representative before proceeding.

Other manuals

See also the safety requirements and information in the original manufacturer's manuals for any other equipment furnished separately for use in this system.

1.2 Safety terminology and symbols

About safety messages

It is extremely important that you read, understand, and follow the safety messages and regulations carefully before handling the product. They are published to help prevent these hazards:

- Personal accidents and health problems
- Damage to the product and its surroundings
- Product malfunction

Hazard levels

Hazard level	Indication
 DANGER:	A hazardous situation which, if not avoided, will result in death or serious injury
 WARNING:	A hazardous situation which, if not avoided, could result in death or serious injury
 CAUTION:	A hazardous situation which, if not avoided, could result in minor or moderate injury
NOTICE:	Notices are used when there is a risk of equipment damage or decreased performance, but not personal injury.

Special symbols

Some hazard categories have specific symbols, as shown in the following table.

Electrical hazard	Magnetic fields hazard
 Electrical Hazard:	 CAUTION:

1.3 User safety

All regulations, codes, and health and safety directives must be observed.

The site

- Observe lockout and tagout procedures before starting work on the product, such as transportation, installation, maintenance, or service.
- Pay attention to the risks presented by gas and vapors in the work area.
- Always be aware of the area surrounding the equipment, and any hazards posed by the site or nearby equipment.

Qualified personnel

This product must be installed, operated, and maintained by qualified personnel only.

Protective equipment and safety devices

- Use personal protective equipment as needed. Examples of personal protective equipment include, but are not limited to, hard hats, safety goggles, protective gloves and shoes, and breathing equipment.
- Make sure that all safety features on the product are functioning and in use at all times when the unit is being operated.

1.4 Ex-approved products

Follow these special handling instructions if you have an Ex-approved unit.

Personnel requirements

These are the personnel requirements for Ex-approved products in potentially explosive atmospheres:

- All work on the product must be carried out by certified electricians and Xylem authorized mechanics. Special rules apply to installations in explosive atmospheres.
- All users must know about the risks of electric current and the chemical and physical characteristics of the gas, the vapor, or both present in hazardous areas.
- Any maintenance for Ex-approved products must conform to international and national standards (for example, IEC/EN 60079-17).

Xylem disclaims all responsibility for work done by untrained and unauthorized personnel.

Product and product handling requirements

These are the product and product handling requirements for Ex-approved products in potentially explosive atmospheres:

- Only use the product in accordance with the approved motor data.
- The equipment must never run dry during operation. The volute must be filled with liquid during operation. Dry running during service and inspection is only permitted outside the classified area.
- Before you start work on the product, make sure that the product and the control panel are isolated from the power supply and the control circuit, so they cannot be energized.
- Do not open the product while it is energized or in an explosive gas atmosphere.

- Intrinsically safe circuits are normally required for the automatic level-control system by the level regulator if mounted in zone 0.
- The yield stress of fasteners must be in accordance with the approval drawing and the product specification.
- Do not modify the equipment without approval from an Ex-approved Xylem representative.
- Only use original Xylem spare parts that are provided by an Ex-approved Xylem representative.
- The thermal contacts that are fitted to the stator windings must be connected correctly to a separate motor control circuit and in use. The thermal contacts shall be connected to a monitoring device, which disconnects the power supply immediately upon activation. This action prevents the rise of temperatures above the temperature value for the approval classification.
- The width of flameproof joints is more than the values specified in the tables of the EN/IEC 60079-1 standard. For information contact the manufacturer.
- The gap of flameproof joints is less than the values specified in Table 2 of the EN/IEC 60079-1 standard. For information contact the manufacturer.
- It is NOT allowed to repair the flameproof joints.
- Ambient temperature: -20°C to 60°C (T3); -20°C to 25°C (T4)

Guidelines for compliance

Compliance is fulfilled only when you operate the unit within its intended use. Do not change the conditions of the service without the approval of an Ex-approved Xylem representative. When you install or maintain explosion proof products, always comply with the directive and applicable standards (for example, IEC/EN 60079–14).

Minimum permitted liquid level

See the dimensional drawings of the product for the minimum permitted liquid level according to the approval for explosion proof products. If the information is missing on the dimensional drawing, the product must be fully submerged. Level-sensing equipment must be installed if the product can be operated at less than the minimum submersion depth.

Monitoring equipment

For additional safety, use condition-monitoring devices. Examples of condition-monitoring devices include, but are not limited to, the following:

- Level indicators
- Temperature detectors in addition to the stator thermal detectors

Any thermal detectors or thermal protection devices delivered with the pump must be installed and in use at all times.

The site owner is responsible for selection, installation, and proper maintenance of functional monitoring equipment for motor protection.

1.5 Special hazards

1.5.1 Biological hazards

The product is designed for use in liquids that can be hazardous to your health. Observe these rules when you work with the product:

- Make sure that all personnel who may come into contact with biological hazards are vaccinated against diseases to which they may be exposed.
- Observe strict personal cleanliness.



WARNING: Biological Hazard

Infection risk. Rinse the unit thoroughly with clean water before working on it.

1.5.2 Wash the skin and eyes

Follow these procedures for chemicals or hazardous fluids that have come into contact with your eyes or your skin:

Condition	Action
Chemicals or hazardous fluids in eyes	1. Hold your eyelids apart forcibly with your fingers. 2. Rinse the eyes with eyewash or running water for at least 15 minutes. 3. Seek medical attention.
Chemicals or hazardous fluids on skin	1. Remove contaminated clothing. 2. Wash the skin with soap and water for at least 1 minute. 3. Seek medical attention, if necessary.

1.6 Protecting the environment

Emissions and waste disposal

Observe the local regulations and codes regarding:

- Reporting of emissions to the appropriate authorities
- Sorting, recycling and disposal of solid or liquid waste
- Clean-up of spills

Exceptional sites



CAUTION: Radiation Hazard

Do NOT send the product to Xylem if it has been exposed to nuclear radiation, unless Xylem has been informed and appropriate actions have been agreed upon.

1.7 End-of-life product disposal

Handle and dispose of all waste in compliance with local laws and regulations.

EU and UK only: Correct disposal of this product — waste electrical and electronic equipment

- EU: Directive 2012/19/EU on waste electrical and electronic equipment (WEEE)
- UK: SI 2013 No. 3113



W5000973B

This marking on the product, accessories or literature indicates that the product should not be disposed of with other waste at the end of its working life.

1.8 Spare parts



CAUTION:

Only use the manufacturer's original spare parts to replace any worn or faulty components. The use of unsuitable spare parts may cause malfunctions, damage, and injuries as well as void the warranty.

1.9 Warranty

For information about warranty, see the sales contract.

2 Transportation and Storage

2.1 Examine the delivery

EN

2.1.1 Examine the package

1. Examine the package for damaged or missing items upon delivery.
2. Record any damaged or missing items on the receipt and freight bill.
3. If anything is out of order, then file a claim with the shipping company.
If the product has been picked up at a distributor, make a claim directly to the distributor.

2.1.2 Examine the unit

1. Remove packing materials from the product.
Dispose of all packing materials in accordance with local regulations.
2. To determine whether any parts have been damaged or are missing, examine the product.
3. If applicable, unfasten the product by removing any screws, bolts, or straps.
Use care around nails and straps.
4. If there is any issue, then contact a sales representative.

2.2 Transportation guidelines

2.2.1 Precautions



DANGER: Crush Hazard

Moving parts can entangle or crush. Always disconnect and lock out power before servicing to prevent unexpected startup. Failure to do so could result in death or serious injury.



Position and fastening

The unit can be transported either horizontally or vertically. Make sure that the unit is correctly fastened during transportation, and cannot roll or fall over.

2.2.2 Lifting

Always inspect the lifting equipment and tackle before starting any work.



WARNING: Crush Hazard

Always lift the unit by its designated lifting points.
Use suitable lifting equipment and ensure that the product is properly harnessed.
Wear personal protective equipment.
Stay clear of cables and suspended loads.

NOTICE:

Never lift the unit by its cables or hose.

Lifting equipment

Lifting equipment is always required to handle the unit. The lifting equipment must fulfill the following requirements:

- The minimum height between the lifting hook and the floor must be sufficient to lift the unit. Contact a Xylem representative for more information.
- The lifting equipment must be able to hoist the unit straight up and down, preferably without the need for resetting the lifting hook.
- The lifting equipment must be correctly anchored and in good condition.
- The lifting equipment must support the weight of the entire assembly. Only authorized personnel may use the lifting equipment.
- Two sets of lifting equipment must be used to lift the unit for repair work.
- The lifting equipment must be dimensioned to lift the unit with any remaining pumped media in it.
- The lifting equipment must not be oversized.

**CAUTION: Crush Hazard**

Improperly-dimensioned lifting equipment can lead to injury. A site-specific risk analysis must be done.

2.3 Temperature ranges for transportation, handling and storage

Handling at freezing temperature

At temperatures below freezing, the product and all installation equipment, including the lifting gear, must be handled with extreme care.

Make sure that the product is warmed up to a temperature above the freezing point before starting up. Avoid rotating the impeller/propeller by hand at temperatures below the freezing point. The recommended method to warm the unit up is to submerge it in the liquid which will be pumped or mixed.

NOTICE:

Never use a naked flame to thaw the unit.

Unit in as-delivered condition

If the unit is still in the condition in which it left the factory - all packing materials are undisturbed - then the acceptable temperature range during transportation, handling and storage is: -50°C (-58°F) to $+60^{\circ}\text{C}$ ($+140^{\circ}\text{F}$).

If the unit has been exposed to freezing temperatures, then allow it to reach the ambient temperature of the sump before operating.

Lifting the unit out of liquid

The unit is normally protected from freezing while operating or immersed in liquid, but the impeller/propeller and the shaft seal may freeze if the unit is lifted out of the liquid into a surrounding temperature below freezing.

Follow these guidelines to avoid freezing damage:

1. Empty all pumped liquid, if applicable.
2. Check all liquids used for lubrication or cooling, both oil and water-glycol mixtures, for the presence of unacceptable amounts of water. Change if needed.

Water-glycol mixtures: Units equipped with an internal closed-loop cooling system are filled with a mixture of water and 30% glycol. This mixture remains a flowing liquid at temperatures down to -13°C (9°F). Below -13°C (9°F), the viscosity increases such that the glycol mixture will lose its flow properties. However, the glycol-water mixture will not solidify completely and thus cannot harm the product.

2.4 Storage guidelines

Storage location

The product must be stored in a covered and dry location free from heat, dirt, and vibrations.

NOTICE:

Protect the product against humidity, heat sources, and mechanical damage.

NOTICE:

Do not place heavy weights on the packed product.

EN

Freezing precautions

The unit is frost-proof while operating or immersed in liquid, but the impeller/propeller and the shaft seal may freeze if the unit is lifted out of the liquid into a surrounding temperature below freezing.

Follow these guidelines to avoid freezing damage:

When	Guideline
Before storage	- The unit must be allowed to run for a short time after raising it to discharge remaining pumped liquid. This does not apply to impeller/propeller units. - The discharge opening must be covered in a suitable way, or placed facing down so that any still remaining pumped liquid runs out. - If present, the cooling jacket must be drained manually by opening the air vent screws at the top of the cooling jacket.
After storage	If the impeller/propeller is frozen, it must be thawed by immersing the unit in liquid before operating the unit. NOTICE: Never use a naked flame to thaw the unit.

Long-term storage

If the unit is stored for more than six months, then the following apply:

- Before operating the unit after storage, it must be inspected. Special attention must be given to the seals and the cable entry.
- The impeller or propeller must be rotated every other month to prevent the seals from sticking together.

Packaging material stacking limit

If the packaging material has an indicated stacking limit, then it is valid for 23°C (73°F) and 50% relative humidity. Depending on the material, other temperature and humidity ranges can reduce the stacking limit.

3 Product Description

3.1 Products included

Pump model	Non-explosion proof version	Explosion proof version	Premium Efficiency motor (IE3)	F-hydraulic Chopper	N-hydraulic	Impeller material		
						Gray iron	Hard-Iron	Stainless steel
3153.091		X			X	X		
3153.095		X			X		X	
3153.182	X				X	X		
3153.185	X				X		X	
3153.350	X			X			X	
3153.390		X		X			X	
3153.660	X				X			X
3153.670		X			X			X
3153.800	X		X		X	X		
3153.810		X	X		X	X		
3153.820	X		X		X		X	
3153.830		X	X		X		X	
3153.840	X		X	X			X	
3153.850		X	X	X			X	
3153.860	X		X		X			X
3153.870		X	X		X			X

Pump-specific information

For the specific weight, current, voltage, power ratings, and speed of the pump, see the data plate.

3.2 Pump design

The pump is submersible, and driven by an electric motor.

For a list of pump version and corresponding motor type, see [Technical Reference](#) on page 83.

Intended use

The product is intended for moving wastewater, sludge, raw and clean water. Always follow the limits that are given in [Technical Reference](#) on page 83. If there is a question regarding the intended use of the equipment, please contact a local sales and service representative before proceeding.



DANGER: Explosion/Fire Hazard

Special rules apply to installations in explosive or flammable atmospheres. Do not install the product or any auxiliary equipment in an explosive zone unless it is rated explosion-proof or intrinsically-safe. If the product is rated explosion-proof or intrinsically-safe, then see the specific explosion-proof information in the safety chapter before taking any further actions.

NOTICE:

Do NOT use the unit in highly corrosive liquids.

Spare parts

- Modifications to the unit or installation should only be carried out after consulting with Xylem.
- Original spare parts and accessories that are authorized by Xylem are essential for compliance. The use of other parts can invalidate any claims for warranty or compensation. For more information contact your Xylem representative.

EN

Pressure class

LT	Low head
MT	Medium head
HT	High head
SH	Super high head

Exterior™ product concept

Exterior™ is a product concept including N-technology, Premium efficiency motor, and the intelligent control SmartRun™.

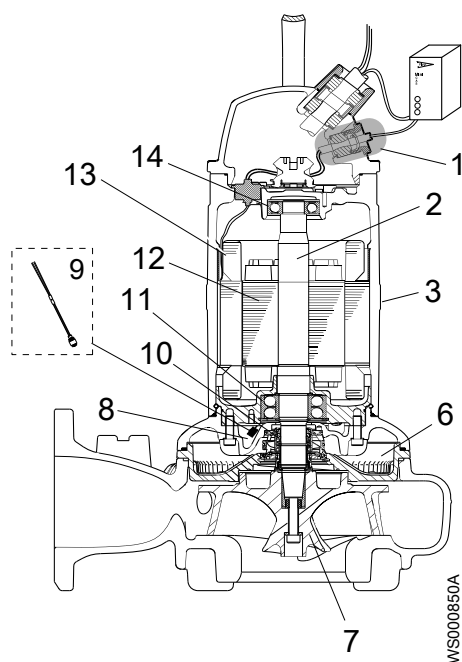
Parts

Figure 1: Without cooling jacket

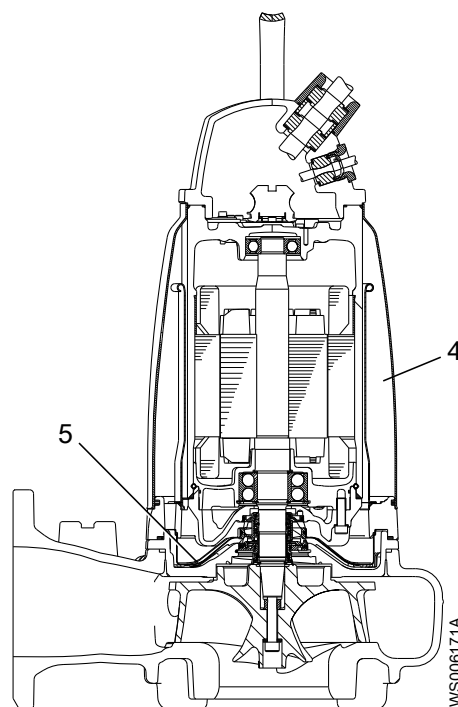


Figure 2: With cooling jacket

Position	Denomination	Description
1	Cable entry	Power connection, and optional connection to monitoring systems
2	Shaft	Stainless steel, with an integrated rotor For F-hydraulic manure, the shaft is also fitted with a clutch mechanism
3	Cooling without jacket	The pump is cooled by the ambient liquid.
4	Cooling with jacket	The motor is cooled by a closed loop system. An integrated coolant pump circulates the coolant whenever the pump is operated.

Position	Denomination	Description
5	Flow diffuser	Provides heat transfer from the coolant to the pumped fluid
6	Seal housing	Includes a coolant that lubricates and cools the seals; the housing acts as a buffer between the pumped fluid and the electric motor
7	Impeller	N-impeller, a semi-open, two-vane impeller F-hydraulic manure pump uses an open, two-vane S-impeller with cutting function
8	Inspection chamber	Equipped with an FLS10 leakage sensor to prevent damage to the motor
9	FLS10	Leakage sensor
10	Mechanical seals	Made of one of the following alternatives: • Alternative 1 – Inner seal: corrosion-resistant cemented carbide WCCR/WCCR – Outer seal: corrosion-resistant cemented carbide WCCR/WCCR • Alternative 2 – Inner seal: corrosion-resistant cemented carbide WCCR/WCCR – Outer seal: silicon carbide RSiC/RSiC
11	Main bearings	Consisting of a two-row angular contact ball bearing
12	Motor	For information about the motor, see Technical Reference on page 83.
13	Thermal contact/ Thermistors	For information about the thermal contact and thermistors, see Monitoring equipment on page 12.
14	Support bearing	Consisting of a two-row ball bearing

3.3 Monitoring equipment

There are standard and optional sensors that are connected to the monitoring equipment. The monitoring equipment must be designed so that it is possible to avoid an automatic restart.

It is possible to use the following monitoring systems:

- MiniCAS II
- MAS 801
- MAS 711

For more information about the monitoring systems, see the applicable documentation.

Ex-approved pumps

Any thermal detectors or thermal protection devices delivered with the pump must be installed and in use at all times.

The site owner is responsible for the selection, the installation, and the correct maintenance of functional monitoring equipment for motor protection.

Sensors

These sensors are always included in the pump.


- | | |
|---------------------|--|
| Thermal contacts | <ul style="list-style-type: none"> • The stator has three thermal contacts that are connected in series. • The thermal contacts activate the alarm and stop the pump at overtemperature. |
| FLS10, float switch | <ul style="list-style-type: none"> • Detects liquid • Installed in the inspection chamber • Recommended for pumps in a vertical position |

Sensors and pump memory, optional

PTC thermistors	• Detect overtemperature • Activate the alarm at overtemperature • Connected in series
Pt100, analog temperature sensor	Optional locations: • Stator winding • Main bearing • Support bearing
FLS, leakage sensor	Optional location: • Junction box
Current transformer, used for MAS 801	Measures the pump current and speed
Pump electronic module (PEM), used for MAS 801	• Interfaces with all the pump sensors and communicates the measurement values over two wires • Contains an integrated 3-axis vibration sensor • Contains pump data plate information • Contains configurations of the monitoring system • Stores measurement and service data
VIS 10, vibration sensor, used for MAS 711	• Measures 1-axis vibration • Located in the junction box
Pump memory, used for MAS 711	• Contains configurations of the monitoring system • Stores the running statistics

3.4 The data plate

The data plate is a metal label that is located on the main body of the products. The data plate lists key product specifications. Specially approved products also have an approval plate.

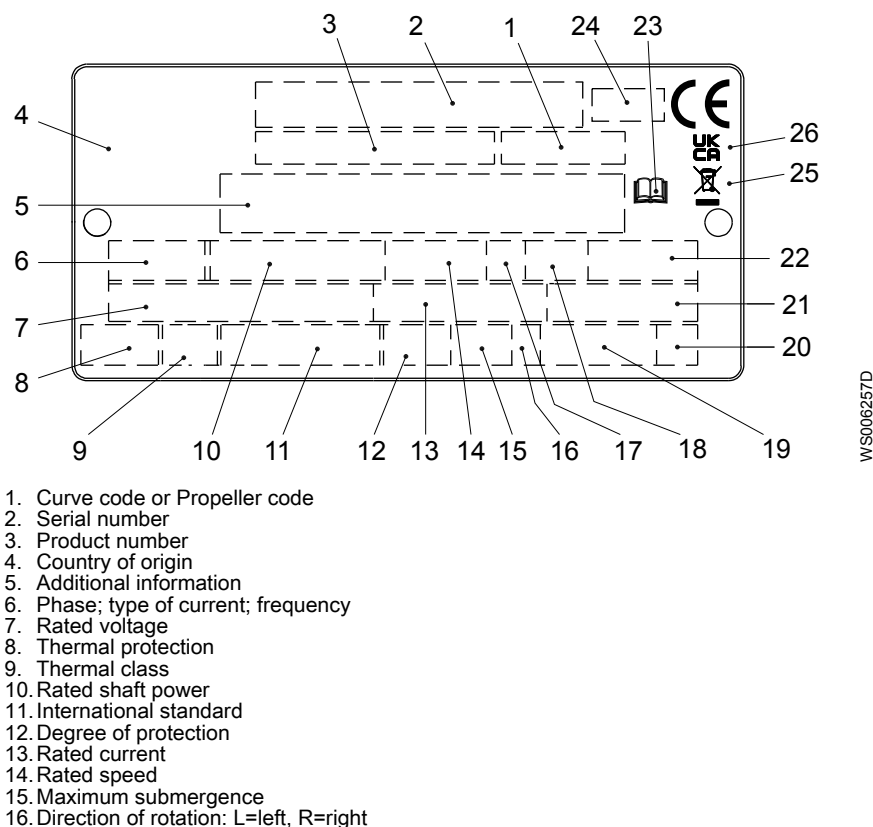

- 17. Duty class
- 18. Duty factor
- 19. Product weight
- 20. Locked rotor code letter
- 21. Power factor
- 22. Maximum ambient temperature
- 23. Read installation manual
- 24. Notified body, only for EN-approved Ex products
- 25. WEEE-Directive symbol
- 26. UKCA marking

Figure 3: The data plate

3.5 The warm liquid data plate

If the product is approved for warm liquid application, an additional warm liquid data plate is attached to the product. The warm liquid data plate specifies the maximum input power and the rated current for each related maximum ambient temperature.

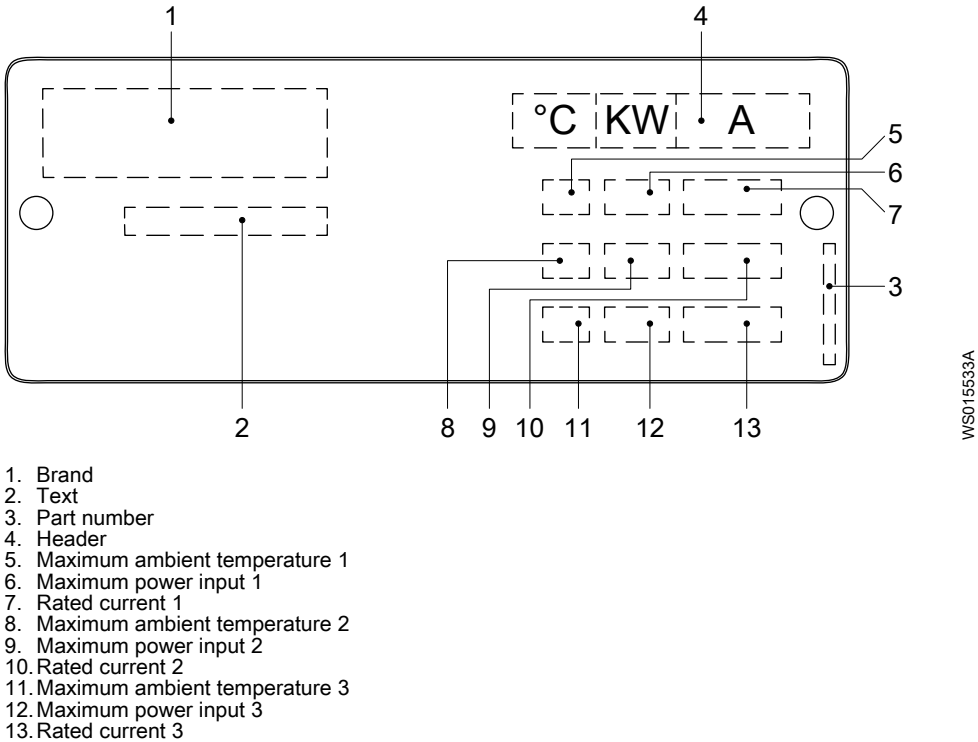


Figure 4: The warm liquid data plate

3.6 Motor regulation

This product is submersible and therefore exempted from the motor efficiency requirement, in accordance with EU commission regulation 2019/1781 Article 2(2)(e).

3.7 Approvals

Product approvals for hazardous locations

3153

This table shows product approvals for the following products:

- 3153.091
- 3153.095
- 3153.390
- 3153.670
- 3153.810
- 3153.830


- 3153.850
- 3153.870

Type	Approval
European Norm (EN)	• ATEX Directive 2014/34/EU • EN IEC 60079-0:2018, EN 60079-1:2014, EN ISO 80079-36:2016, EN ISO 80079-37:2016 •  II 2 G Ex db h IIB T3 Gb •  I M2 Ex db h I Mb
IEC	• IECEx scheme 02 • IEC 60079-0:2017, IEC 60079-1:2014-06, ISO 80079-36:2016, ISO 80079-37:2016 • Ex db h IIB T3 Gb • Ex db h I Mb
FM (FM Approvals)	• Explosion proof for use in Class I, Div. 1, Group C and D • Dust ignition proof for use in Class II, Div. 1, Group E, F and G • Suitable for use in Class III, Div. 1, Hazardous Locations
CSA Ex	• Explosion proof for use in Class I, Div. 1, Group C and D
UKEx	• UK SI 2016 No. 1107 • EN IEC 60079-0:2018, EN 60079-1:2014, EN ISO 80079-36:2016, EN ISO 80079-37:2016 •  II 2 G Ex db h IIB T3 Gb •  I M2 Ex db h I Mb

EN

EN approval plate

This illustration describes the EN approval plate and the information that is contained in its fields.

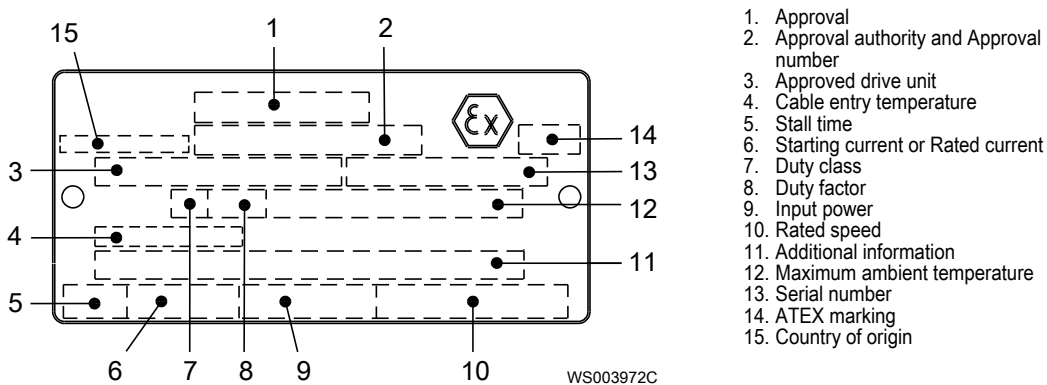


1. Approval
2. Approval authority and Approval number
3. Approved drive unit
4. Cable entry temperature
5. Stall time
6. Starting current or Rated current
7. Duty class
8. Duty factor
9. Input power
10. Rated speed
11. Additional information
12. Maximum ambient temperature
13. Serial number
14. ATEX marking
15. Country of origin

IEC approval plate

This illustration describes the IEC approval plate and the information that is contained in its fields.


International Norm; not for EU member countries.

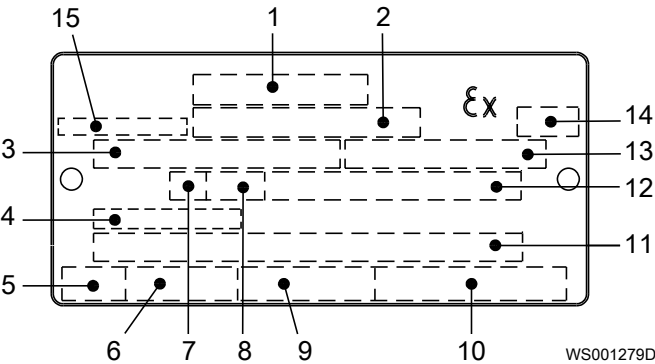

- 1. Approval
- 2. Approval authority and Approval number
- 3. Approved drive unit
- 4. Cable entry temperature
- 5. Stall time
- 6. Starting current or Rated current
- 7. Duty class
- 8. Duty factor
- 9. Input power
- 10. Rated speed
- 11. Additional information
- 12. Maximum ambient temperature
- 13. Serial number
- 14. ATEX marking
- 15. Country of origin

FM approval plate


This illustration describes the FM approval plate and the information that is contained in its fields.

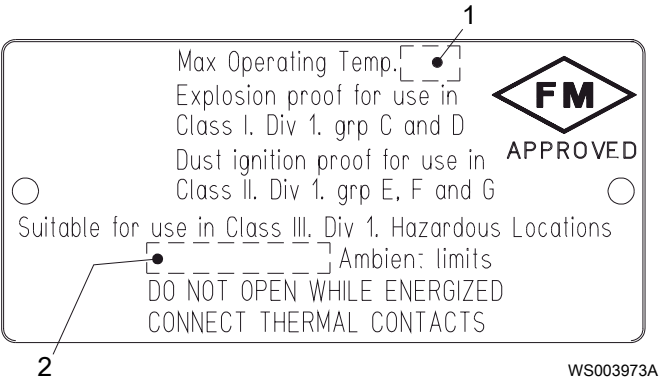

- 1. Temperature class
- 2. Maximum ambient temperature

CSA approval plate


This illustration describes the CSA approval plate and the information that is contained in its fields.

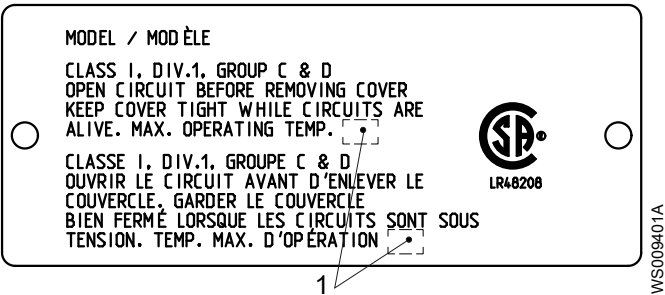

- 1. Temperature class

United Kingdom: UKEx approval plate

This illustration describes the UKEx approval plate and the information that is contained in its fields.

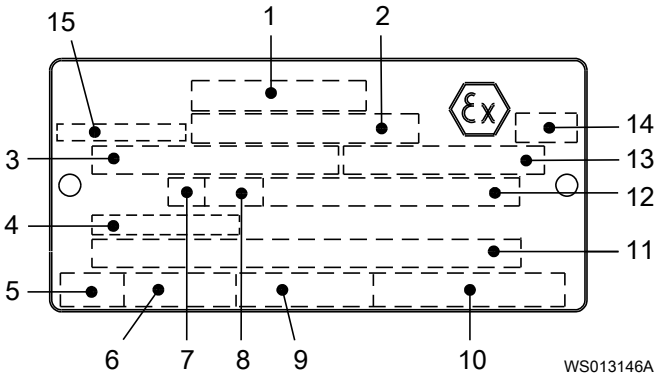


- 1. Approval
- 2. Approval authority and Approval number
- 3. Approved drive unit
- 4. Cable entry temperature
- 5. Stall time
- 6. Starting current or Rated current
- 7. Duty class
- 8. Duty factor
- 9. Input power
- 10. Rated speed
- 11. Additional information
- 12. Maximum ambient temperature
- 13. Serial number
- 14. UKEx marking
- 15. Country of origin

3.8 Product denomination

Reading instruction

In this section, code characters are illustrated accordingly:
X = letter
Y = digit
The different types of codes are marked up with a, b and c. Code parameters are marked up with numbers.

Codes and parameters

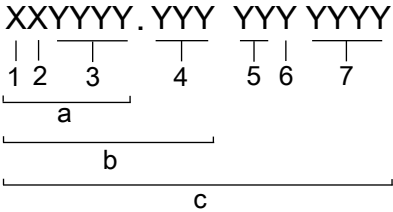

WS006265B

Type of Callout	Number	Indication
Type of code	a	Sales denomination
	b	Product code
	c	Serial number
Parameter	1	Hydraulic end
	2	Type of installation
	3	Sales code
	4	Version
	5	Production year
	6	Production cycle
	7	Running number

4 Installation

4.1 Precautions



Before starting work, make sure that the safety instructions have been read and understood.

DANGER: Electrical Hazard

Before starting work on the unit, make sure that the unit and the control panel are isolated from the power supply and cannot be energized. This applies to the control circuit as well.



DANGER: Inhalation Hazard

Before entering the work area, make sure that the atmosphere contains sufficient oxygen and no toxic gases.



WARNING: Electrical Hazard

The permanent-magnet motor generates voltage when the shaft rotates, even if power sources are disconnected. Never perform any electrical work if the shaft could rotate.

4.1.1 Hazardous atmospheres



DANGER: Explosion/Fire Hazard

Special rules apply to installations in explosive or flammable atmospheres. Do not install the product or any auxiliary equipment in an explosive zone unless it is rated explosion-proof or intrinsically-safe. If the product is rated explosion-proof or intrinsically-safe, then see the specific explosion-proof information in the safety chapter before taking any further actions.

General requirements

These requirements apply:

- Use the pump dimensional drawing in order to ensure proper installation.
- In S-, T-, and Z-installations the pump must be equipped with cooling jacket

Before installing the pump, do the following:

- Provide a suitable barrier around the work area, for example, a guard rail.
- Make sure that equipment is in place so that the unit cannot roll or fall over during the installation process.
- Check the explosion risk before you weld or use electric hand tools.
- Check that the cable and cable entry have not been damaged during transport.
- Always remove all debris and waste material from the sump, inlet piping, and discharge connection, before you install the pump.
- Always check the impeller rotation before lowering the pump into the pumped liquid.
- If the unit has a permanent magnet motor, then ensure that you have read and understood all safety instructions regarding permanent magnet motors.

NOTICE:

Do not run the pump dry.

NOTICE:

Never force piping to make a connection with a pump.

Authority regulation

Vent the tank of a sewage station in accordance with local plumbing codes.

EN

Fasteners

- Only use fasteners of the correct size and material.
- Replace all corroded or damaged fasteners.
- Make sure that all the fasteners are correctly tightened and that there are no missing fasteners.

4.2 Install with P-installation

In the P-installation, the pump is installed on a stationary discharge connection, and operates either completely or partially submerged in the pumped liquid. These requirements and instructions only apply when the installation is made according to the dimensional drawing.

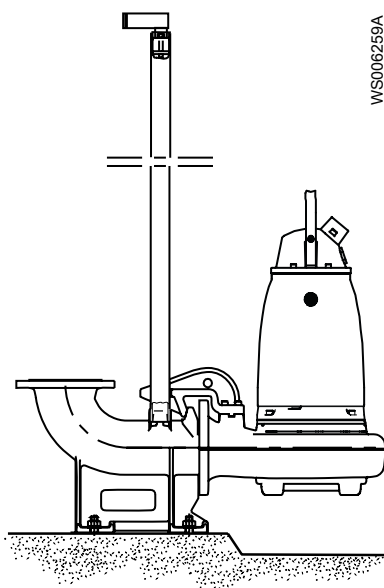


Figure 5: P-installation

These items are required:

- Guide bars
- Guide bar bracket for attaching the guide equipment to the access frame or to the upper part of the sump
- Level regulators or other control equipment for start, stop, and alarm
- Cable holder for holding the cable and regulating the height of the level regulators
- Access frame (with covers) to which the upper guide bar bracket and cable holder can be attached
- Discharge connection for connecting the pump to the discharge line

The discharge connection has a flange which fits the pump housing flange and a bracket for attaching the guide equipment.

- Fasteners for the discharge connection
- Anchor bolts

1. Run a cable between the sump and the stator and monitoring equipment.

Make sure that the cable is not sharply bent or pinched.

2. Install the access frame:

- a) Place the access frame in position and align it horizontally.
 - b) Grout the frame in place.
3. Grout the anchor bolts in place.
Be careful when you align and position the discharge connection in relation to the access frame.
4. Place the discharge connection in position, and tighten the nuts.
5. Install the guide bars:
 - a) Secure the guide bars in the bracket.
 - b) Check that the guide bars are placed vertically. Use a level or a plumb line.
6. Connect the discharge pipe to the discharge connection.
7. Prepare for the level regulator:
 - a) Bolt the cable holder to the access frame.
 - b) Attach the level regulator cable to the cable holder and adjust the height of the level regulator.
 - c) Protect bolts and nuts with a corrosion-preventive compound.
8. Lower the pump along the guide bars.
9. Secure the motor cable:
 - a) Fasten the permanent lifting device to the pump and to the access frame. For example, you can use a stainless-steel lifting chain with shackles.
 - b) Fasten the cable to the cable holder.
Make sure that the cable cannot be sucked into the pump inlet or that it is neither sharply bent, or pinched. Support straps are required for deep installations.
 - c) Connect the motor cable and the starter and monitoring equipment according to the separate instructions.
Make sure that the impeller rotation is correct. For more information, see [Check the impeller rotation](#) on page 50.

Clean all debris from the sump before starting the pump.

4.3 Install with S-installation

In the S-installation, the pump is transportable and intended to operate either completely or partially submerged in the pumped liquid. The pump is equipped with a connection for hose or pipe and stands on a base stand.

These requirements and instructions only apply when the installation is made according to the dimensional drawing. For information about the different installation types, see Parts List.

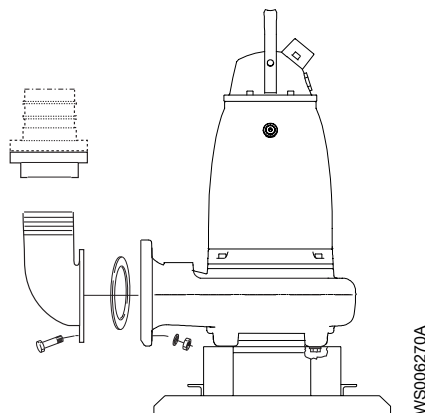


Figure 6: S-installation

1. Run the cable so that it has no sharp bends. Make sure that it is not pinched, and cannot be sucked into the pump inlet.
2. Connect the discharge line.
3. Lower the pump into the sump.
4. Place the pump on the base and make sure it cannot fall over or sink.
Alternatively, the pump can be suspended with chains just above the sump bottom. Make sure that the pump cannot rotate at start-up or during operation.
5. Connect the motor cable and the starter and monitoring equipment according to the separate instructions.

Make sure that the impeller rotation is correct. For more information, see [Check the impeller rotation](#) on page 50.

4.4 Install with Z-installation

In the Z-installation, the pump is installed in a horizontal position on a support stand in a dry well next to the wet well, and a bell-mouth is connected to the inlet pipe. These requirements and instructions are for Z-installations that comply to the dimensional drawing.

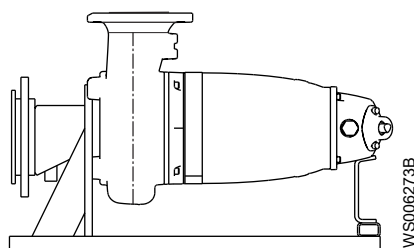


Figure 7: Z-installation

These items are required:

- Support stand and anchor bolts for anchoring the pump to a base
- Shut-off valves that allow you to remove the pump from service

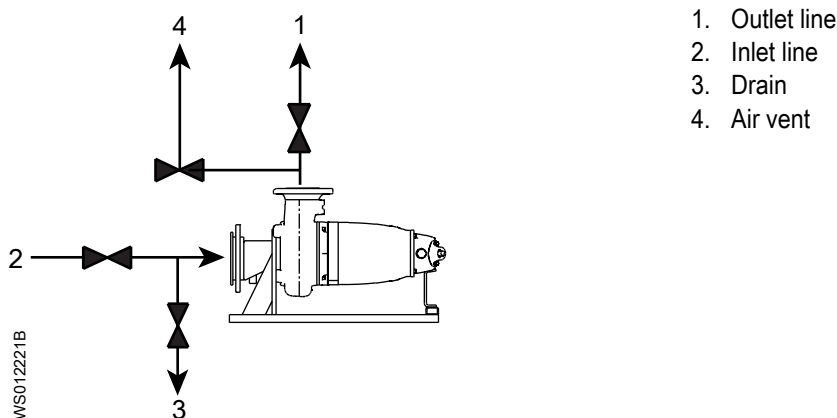


Figure 8: Shutoff and air vent valves (generic pump shown)

- Air vent on the outlet side between the pump and the check valve
- Level regulators or other control equipment for start, stop, and alarm

NOTICE:


The risk of freezing is particularly high in T- or Z-installations.

1. Fasten the pump:

- a) Use the anchor bolts to bolt the support stand to the concrete base.
- b) Bolt the pump to the support stand and the suction connection.
2. Make sure that the pump is vertical for the T-installation or horizontal for the Z-installation.
3. Connect the suction line and discharge line.
If the discharge is rotated, rotate the drive unit so that the inspection and drain plugs face downwards.
4. Connect the motor cable and the starter and monitoring equipment according to the separate instructions.
Make sure that the impeller rotation is correct. For more information, see [Check the impeller rotation](#) on page 50.
5. Make sure that the weight of the pump does not put strain on the piping.

4.5 Install with T-installation

In the T-installation, the pump is installed in a vertical position in a dry well next to the wet well. These requirements and instructions only apply when the installation is made according to the dimensional drawing.

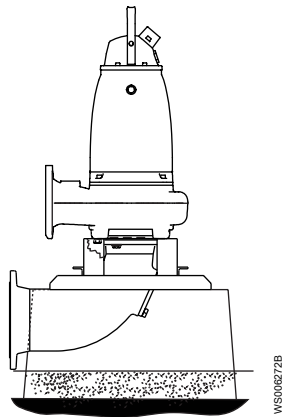

These items are required:

- Support stand and anchor bolts for anchoring the pump to a base
- Inlet elbow for connecting the suction line and discharge line
- Shut-off valves that allow you to remove the pump from service

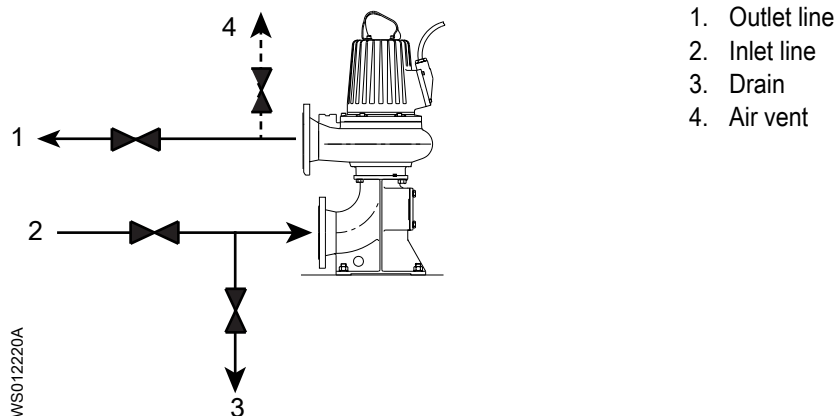


Figure 9: Shutoff and air vent valves (generic pump shown)

- Air vent on the discharge side between the pump and the check valve
- Level regulators or other control equipment for start, stop, and alarm

NOTICE:

The risk of freezing is particularly high in T- or Z-installations.

1. If the stand is used, then go to *Install with the stand* on page 23.
2. Fasten the pump:
 - a) Use the anchor bolts to bolt the support stand to the concrete base.
 - b) Bolt the pump to the support stand and the suction connection.
3. Make sure that the pump is vertical for the T-installation.
4. Connect the suction line and discharge line.
5. Connect the motor cable and the starter and monitoring equipment according to the separate instructions.
Make sure that the impeller rotation is correct. For more information, see *Check the impeller rotation* on page 50.
6. Make sure that the weight of the pump does not put strain on the piping.

EN

4.6 Install with the stand


**WARNING: Crush Hazard**

Always lift the unit by its designated lifting points.

Use suitable lifting equipment and ensure that the product is properly harnessed.

Wear personal protective equipment.

Stay clear of cables and suspended loads.

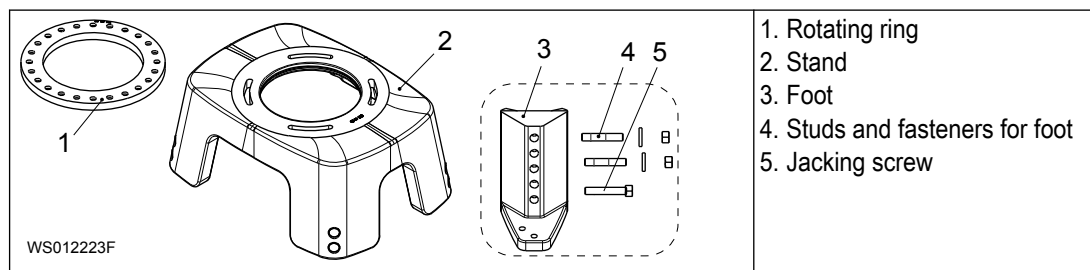
Major parts

For information on dimensional drawings and fasteners, see the following:

- *Stand dimensional drawings* on page 32
- *Fasteners* on page 31

Remove the drive unit before lifting**NOTICE:**

Never lift the complete pump together with the stand. The drive unit must be removed.

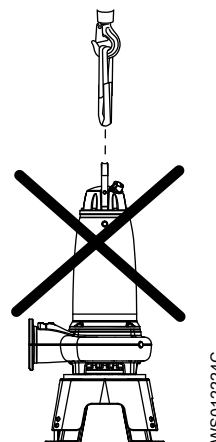


Changing the height of the stand

If the height of the stand is changed, then the floor bolts must be moved.


4.6.1 Find the height setting from the inlet (X)

EN

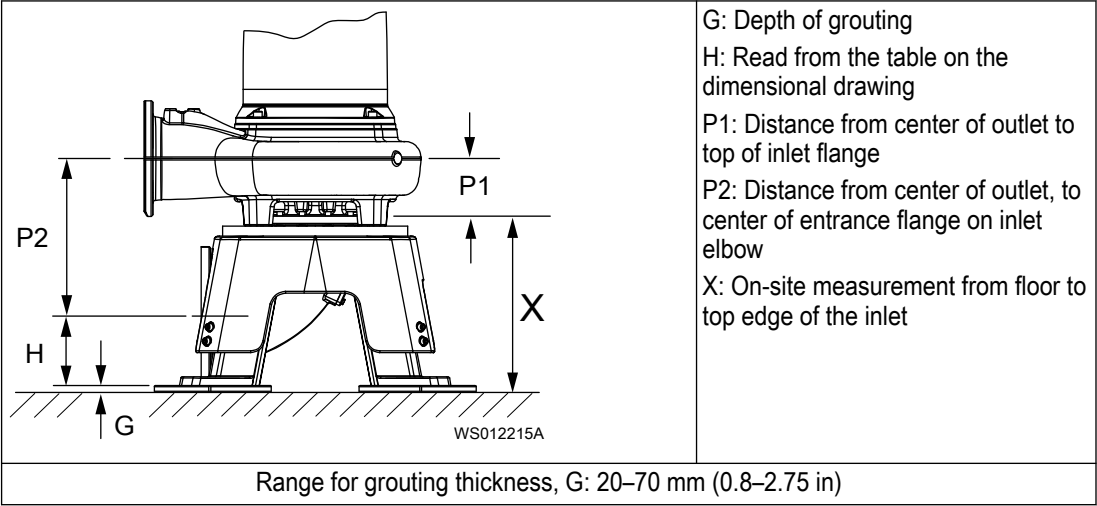

- 1. Measure X.
- 2. Read P1 and P2 from the dimensional drawing.
- 3. Calculate H+G by using the following: $H+G = X + P1 - P2$
- 4. Continue with [Read the height setting from the table](#) on page 24.

4.6.2 Find the height setting from the outlet (Y)

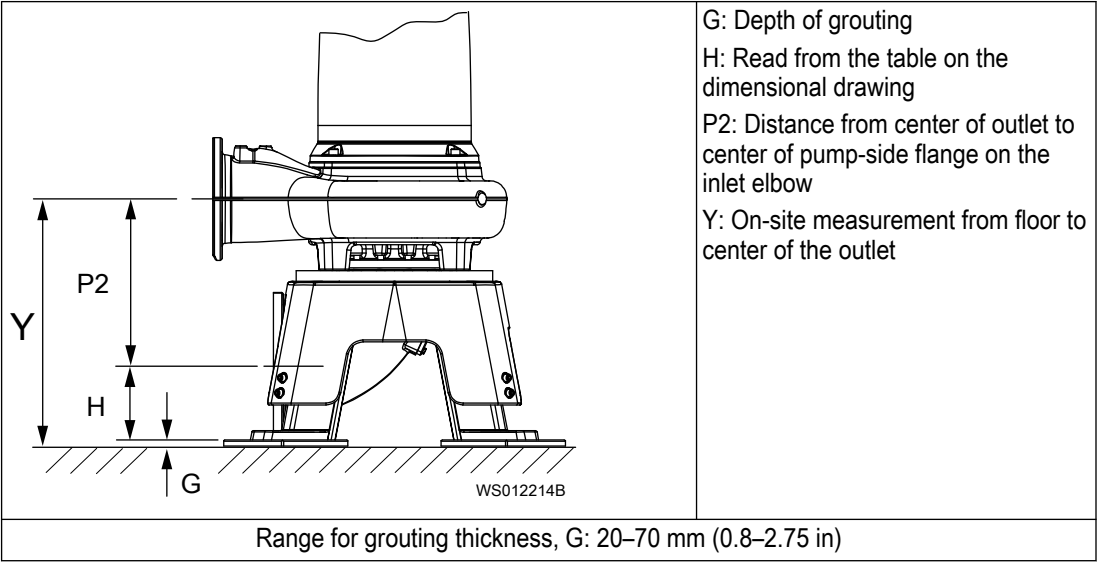

- 1. Measure Y.
- 2. Read P2 from the dimensional drawing.
- 3. Calculate H+G by using the following: $H+G = Y - P2$
- 4. Continue with [Read the height setting from the table](#) on page 24.

4.6.3 Read the height setting from the table

Use the table on the pump-specific dimension drawing.

- 1. Use the column H+G to identify the applicable row.
- 2. Read H and the height setting in the selected row. See the following example.

Height setting	H	H+G
1	245	265 – 315
2	295	315 – 365
3	345	365 – 415
4	395	415 – 465
5	445	465 – 515
6	495	515 – 565

Figure 10: Read height settings on dimensional drawing


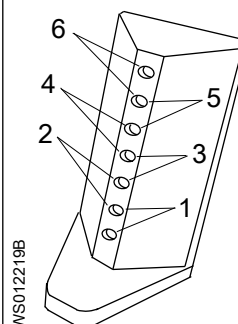


Figure 11: Height settings on foot


3. Calculate the grout thickness: $G = H+G - H$
 The minimum grout thickness is 20 mm (0.8 in).

4.6.4 Assemble the stand

1. If the stand has been delivered with the rotation ring packed on top, then remove the ring.
2. Position two wooden blocks or pallets on the floor, approximately 30 cm (12 in) apart.
 The wooden blocks or pallets must have the same height, and be able to support the weight of the stand.
3. Position the stand upside-down on the two pallets or blocks:
 - a) Attach a lifting strap around the long end of the stand.
 - b) Connect the lifting strap to the lifting equipment.
 - c) Lift the stand carefully and move it over the pallets or blocks.
 - d) Lower the stand until it rests equally on the two pallets.

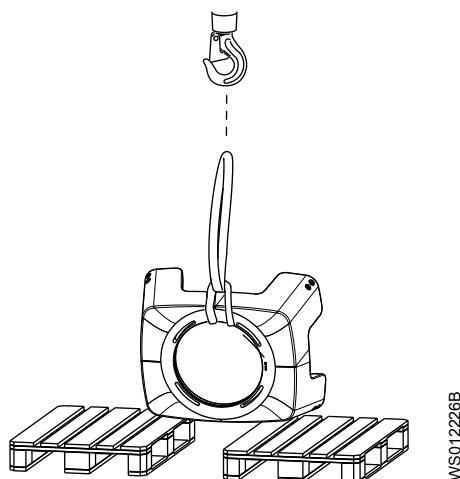


- e) Continue lowering until the stand is upside-down on the blocks or pallets.

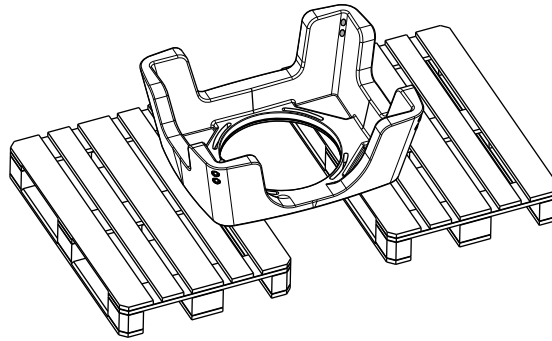


4. Attach the feet:

- a) Identify the pair of holes in the foot for the calculated height setting. See [Read the height setting from the table](#) on page 24.
- b) Insert two studs in the selected holes of the foot. Tighten the studs.

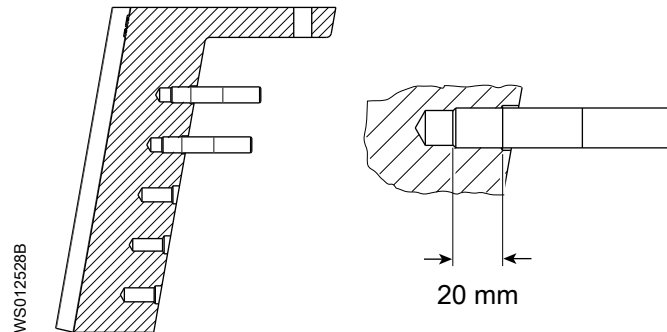


- c) Attach a lifting eye and the lifting equipment to a foot. Lift the foot.
- d) Lower the foot until the two studs in the foot are aligned with the holes in the stand.
- e) Carefully fit the foot with the studs through the holes in the stand.

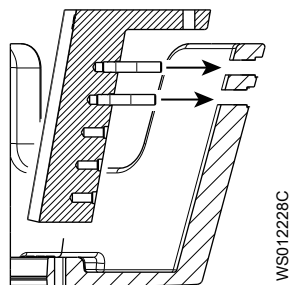

- f) Attach a washer and M16 nut to each stud, and tighten.

Tightening torque: 187 Nm

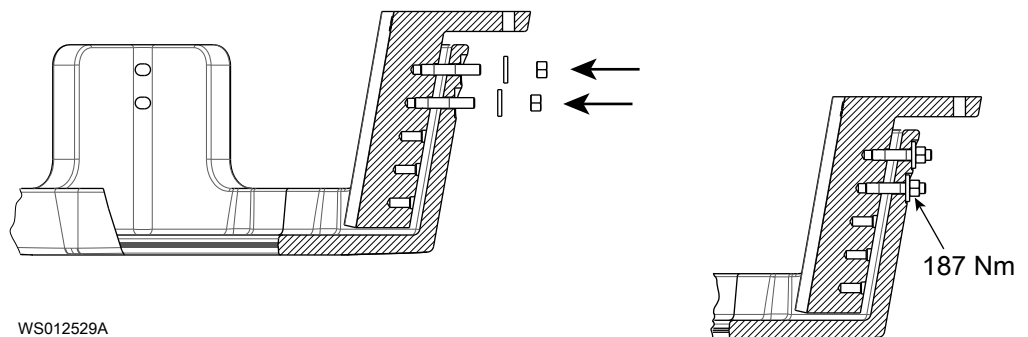


- g) Follow this procedure to install the other three feet.

5. Turn the stand right-side up:


- a) Attach a lifting strap to the long side of the stand.
- b) Lift the stand.
The stand turns during the lift.
- c) Set the stand down on the edge of two feet.
- d) Push the stand over and continue lowering with the lifting equipment.

4.6.5 Install the anchor bolts

1. Lift the assembled stand:
 - a) Attach two lifting slings to the stand. See the following figure.

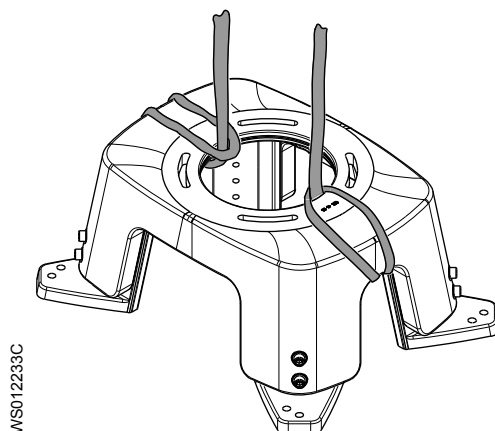

- b) Lift the stand.
2. Lower the stand into position.
Make sure that the stand is oriented so that the inlet elbow can fit through the correct side. See the arrow in the following figure.

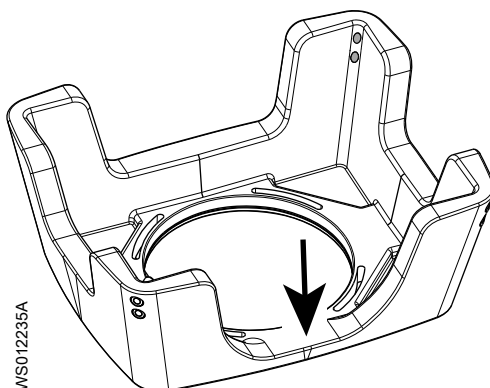

3. Mark where the holes are drilled, by using the feet as template.
Use the non-threaded holes for the anchor bolts
4. Drill holes for the M16 (5/8 ") bolts, and install the anchor bolts.
 - Follow the instructions given by the manufacturer of the anchor bolts.
 - Make sure that the anchor bolts are long enough to accommodate the grouting.
5. Remove the assembled stand.
6. Remove the lifting slings.

4.6.6 Attach the pump housing to the stand


Make sure that pressure in the cooling jacket is relieved, before disconnecting the drive unit bolts.

**CAUTION: Compressed Gas Hazard**

Air inside the chamber may cause parts or liquid to be propelled with force. Be careful when opening. Allow the chamber to de-pressurize before removal of the plug.

1. Remove the bolts which attach the drive unit to the pump housing, and remove the drive unit.
2. Turn the pump housing upside-down.
3. Install the rotating ring on the pump housing feet:
 - a) Lift the rotating ring into position.
 - b) If the rotating ring has four notches or holes on the inner edge, then align the pump housing feet with the four holes.

See the arrows in the following figure.

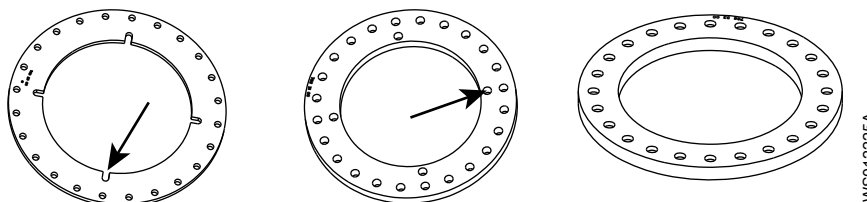


- c) Attach the rotating ring to the pump housing with four bolts.
 4. Turn the pump housing rightside-up.
 5. Attach four lifting eyes to the pump housing. Attach lifting slings to the lifting eyes.
 6. Lift the pump housing and rotating ring, and lower it onto the stand.
- Make sure that the pump housing is oriented correctly to the inlet.
7. Fasten the rotating ring to the stand with four bolts.


4.6.7 Install the stand on the anchor bolts

If the installation of grout is necessary, make sure that all preparations are done before lifting the pump and stand assembly into position. Follow the grout manufacturers recommendations.


1. Lift the pump housing, rotating ring, and stand by using the four lifting eyes in the pump housing.

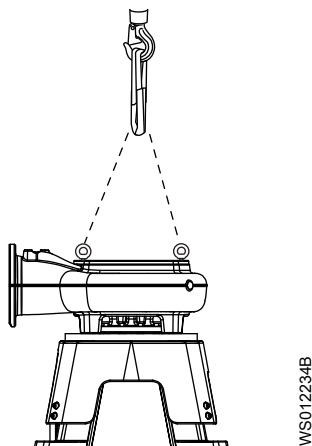


2. Insert the jacking screws into the stand.
3. Position levelling pads for each jacking screw.

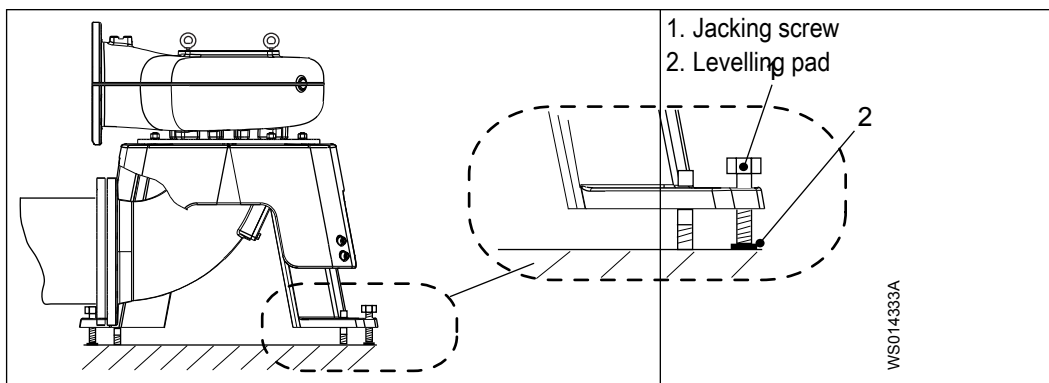


4. Adjust the jacking screws to height G, grout thickness. See [Read the height setting from the table](#) on page 24.
5. Lower the stand onto the anchor bolts.

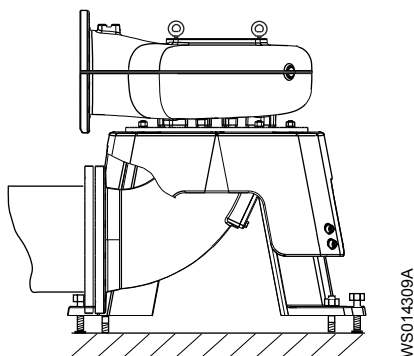

6. Level and align the stand by using the jacking screws.
7. Apply a bond breaker to the jacking screw threads that is under the stand.
The bond breaker allows the jacking screw to be easily removed from the grout.
8. Connect the inlet elbow or inlet pipe to the pump housing.
Make sure that the gasket is in position. See the following figure.

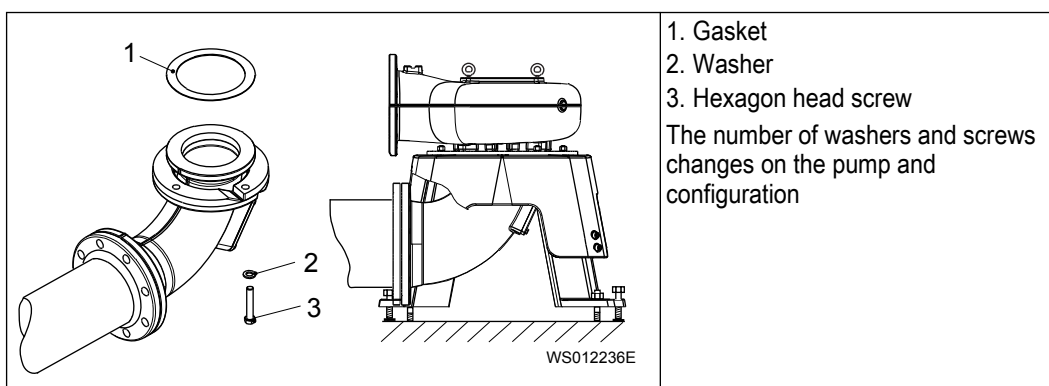

9. Connect the pump outlet piping.
10. Apply the grout under each foot.

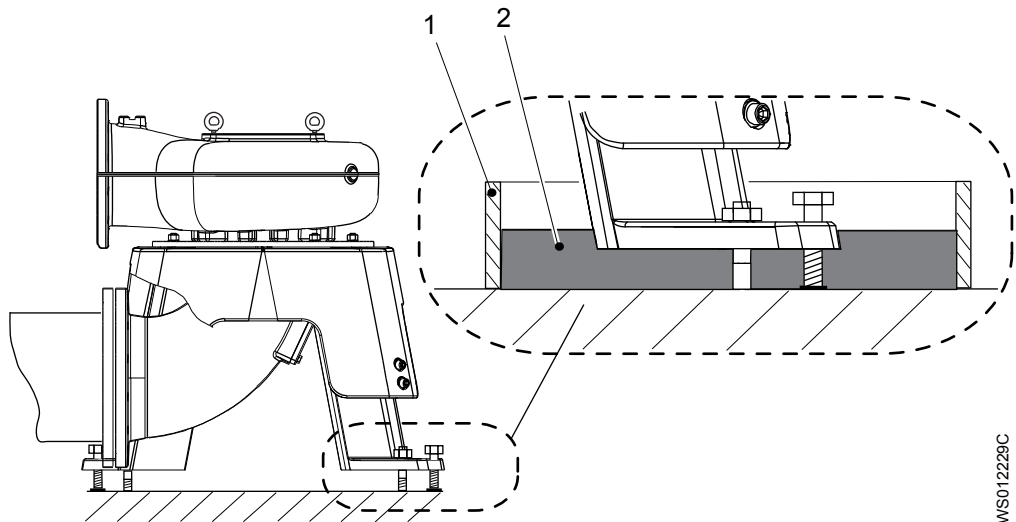

1. Form for the grout
2. Grout

a) Allow the grout to set to at least 20 Mpa (2900 psi) of compression strength.

For more information, see the grout manufacturer data sheet.

11. Remove the jacking screws.

12. Filling the jacking screw holes with grout.


a) Allow the grout to set.

13. Install the anchor nut on the top side of each foot.

4.6.8 Install the drive unit on the pump housing

1. Remove the lifting slings and lifting eyes from the pump housing.
2. Lift the drive unit onto the pump housing.
3. Attach the drive unit to the pump housing with four screws, and tighten to the correct torque.
4. Continue with the installation of the pump.

4.6.9 Fasteners

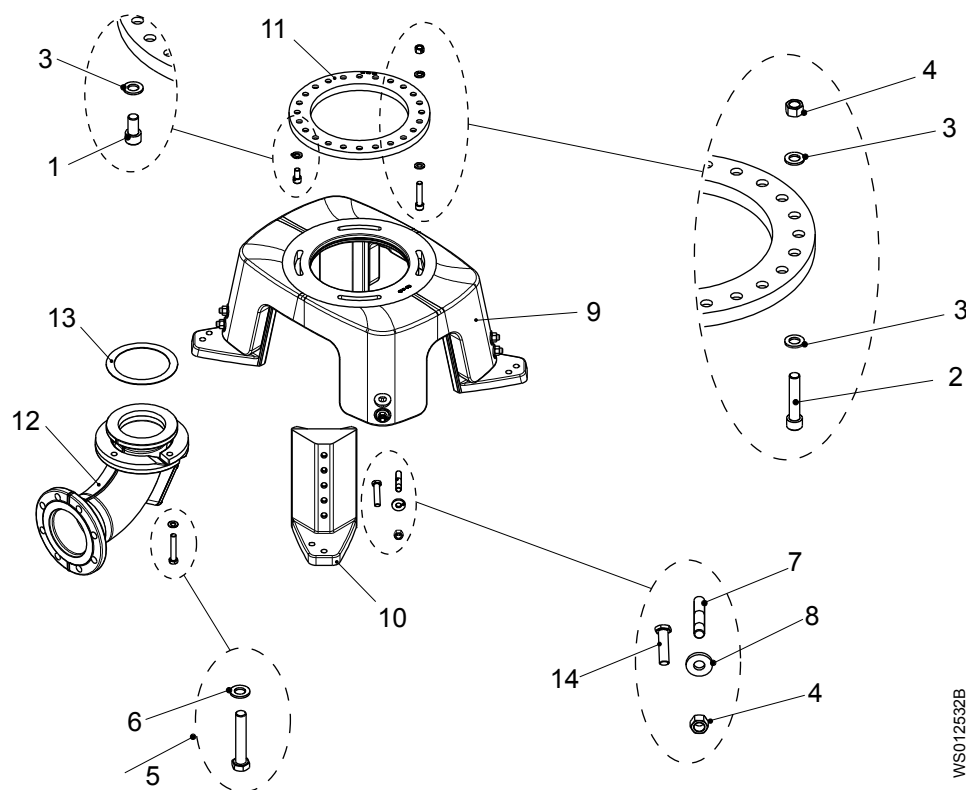

WS012532B

1. Hex socket head screw. See the following tables.
2. Hex socket head screw. See the following tables.
3. Plain washer. Part number 823578.
4. Hex nut. Part number 822337.
5. Hex head screw. See the following table.
6. Plain washer. See the following table.
7. Stud. See the following table.
8. Plain washer. Part number 851045.
9. Stand
10. Foot
11. Ring
12. Suction inlet elbow. Not included.
13. Gasket
14. Jacking screw

Table 1: 3153

Pressure Class	Poles	1 Qty: 4	2 Qty: 4	5 (Qty)	6 (Qty)	7 Qty: 8
LT	4	830370	830378	815584 (4X)	823579 (4X)	809560
LT	6	830370	830482	814962 (12X)	823579 (12X)	809560
MT		830372	830378	815573 (4X)	823578 (4X)	809560
HT Low stand		830372	830378	814939 (4X)	823578 (4X)	809556
HT High stand		830372	830378	814939 (4X)	823578 (4X)	809556
SH Low stand		830372	830378	815547 (4X)	823578 (4X)	809556
SH High stand		830372	830378	815547 (4X)	823578 (4X)	809556

4.6.10 Stand dimensional drawings

The stand dimensional drawings show the pump and stand dimensions that are needed for the installation. The drawings are customized for the different pump configurations. Use the following table to select the drawing.

Table 2: 3153

Pressure Class	Poles	Version Codes	Pump Outlet	Pump Inlet	Suction Inlet	Dimensional Drawing
LT	6	091 / 095 / 182 / 185 / 660 / 670	DN 250	DN 250	DN 300	8403900
LT	4	091 / 095 / 182 / 185 / 660 / 670 / 800 / 810 / 820 / 830 / 860 / 870	DN 200	DN 200	DN 250	8404100
MT		All	DN 150	DN 150	DN 200	8403800
HT		All	DN 100	DN 150	DN 150	8404000
SH		All	DN 80	DN 150	DN 150	8404200

4.7 Make the electrical connections

4.7.1 General precautions



DANGER: Electrical Hazard

Before starting work on the unit, make sure that the unit and the control panel are isolated from the power supply and cannot be energized. This applies to the control circuit as well.



WARNING: Electrical Hazard

Risk of electrical shock or burn. A certified electrician must supervise all electrical work. Comply with all local codes and regulations.



WARNING: Electrical Hazard

There is a risk of electrical shock or explosion if the electrical connections are not correctly carried out, or if there is fault or damage on the product. Visually inspect equipment for damaged cables, cracked casings or other signs of damage. Make sure that electrical connections have been correctly made.



WARNING: Electrical Hazard

The permanent-magnet motor generates voltage when the shaft rotates, even if power sources are disconnected. Never perform any electrical work if the shaft could rotate.



WARNING: Crush Hazard

Risk of automatic restart.



CAUTION: Electrical Hazard

Prevent cables from becoming sharply bent or damaged.

NOTICE:

Leakage into the electrical parts can cause damaged equipment or a blown fuse. Keep the cable ends dry at all times.

Requirements

EN

These general requirements apply for the electrical installation:

- If the pump will be connected to the public mains, then the supply authority must be notified before installing the pump. When the pump is connected to the public power supply, it can cause flickering of incandescent lamps when started.
- The mains voltage and frequency must agree with the specifications on the data plate. If the pump can be connected to different voltages, then follow the specified voltage on the yellow sticker close to the cable entry.
- If the operation can be intermittent, such as S3 periodic duty, then the pump must be supplied with monitoring equipment supporting such operation.
- If stated on the data plate, then the motor is convertible between different voltages.
- The thermal contacts or thermistors must be in use.
- For FM-approved pumps, a leakage sensor must be connected and in use to meet approval requirements.

Motor and short-circuit protection**NOTICE:**

A qualified electrician must select the size of motor protection breakers and fuses. The size must be chosen for the specific motor data such as rated current and starting current.

It is important that the short-circuit protection is not over-dimensioned. Over-dimensioned fuses or motor protection breakers decrease the protection for the motor.

- The fuse rating and the cables must be in accordance with the local rules and regulations.
- The fuses and circuit breakers must have the correct rating.
- The pump overload protection must be connected and set to the rated current.

The starting current in direct-on-line start can be up to six times higher than the rated current.

For more information, see the data plate and if applicable, the cable chart for the rated current.

Cables

When cables are installed, these requirements must be followed:

- The cables must be in good condition, not have any sharp bends, and not be pinched.
- The cables must not be damaged and must not have indentations.
- The cables must not be embossed at the cable entry.
- The cable entry seal sleeve and washers must conform to the outer diameter of the cable.
- The minimum bend radius must not be smaller than the accepted value.
- If a cable is reused, a short piece at the end must be peeled off when the cable is refitted. This action is necessary so that the seal sleeve of the cable entry does not close around the cable at the same point again. If the outer jacket of the cable is damaged, then the cable must be replaced.
Contact a sales or authorized service representative.
- The voltage drop in long cables must be considered. The rated voltage of the drive unit is the voltage that is measured at the cable connection point in the pump.
- If a variable frequency drive (VFD) is used, the screened cable must be used according to the European CE and EMC requirements. For more information, contact a sales or authorized service representative.
- The cable length must be long enough for maintenance work.

- For SUBCAB™ cables, the twisted pair copper foil must be trimmed.
- All unused conductors must be insulated.

4.7.2 Grounding (earthing)

Grounding (earthing) must be done in compliance with all local codes and regulations.

DANGER: Electrical Hazard

All electrical equipment must be grounded (earthed). Test the ground (earth) lead to verify that it is connected correctly and that the path to ground is continuous.

WARNING: Electrical Hazard



Risk of electrical shock. The ground (earth) lead must be sufficiently longer than the phase leads to make sure that the ground lead is the last to become disconnected if the cable is jerked loose.

WARNING: Electrical Hazard

Risk of electrical shock or burn. You must connect an additional ground- (earth-) fault protection device to the grounded (earthed) connectors if persons are likely to come into contact with liquids that are also in contact with the pump or pumped liquid.

4.7.3 Prepare the SUBCAB™ cables

This section applies to SUBCAB™ cables with twisted-pair control conductors.

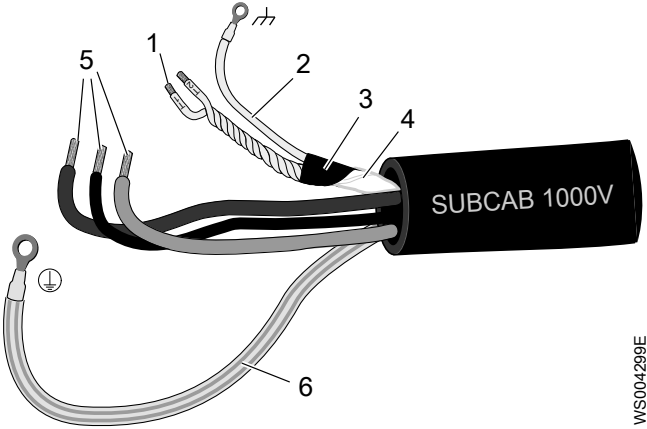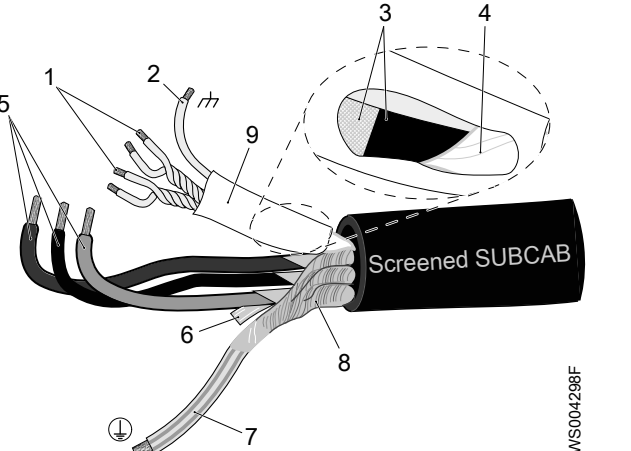The prepared SUBCAB™ cable	The prepared screened SUBCAB™ cable, without cable lugs
 1. T1+T2 twisted pairs in control element 2. Drain wire in control element (tinned copper strands) with shrink tube 3. Aluminum and textile layers 4. Insulation jacket or plastic jacket, for the control element 5. Power conductors 6. Ground (earth) conductor with yellow-green shrink tube WS004299E	 1. T1+T2 and T3+T4 twisted pairs in control element 2. Drain wire in control element (tinned copper strands) with shrink tube 3. Aluminum and textile layers 4. Insulation jacket or plastic jacket, for the control element 5. Power conductors 6. Plastic laminated aluminum foil, screen 7. Ground (earth) conductor with yellow-green shrink tube 8. Uncovered screen/braided wire 9. shrink tube WS004298F

1. Peel off the outer jacket at the end of the cable.
2. Prepare the control element:
 - a) Peel the insulation jacket or plastic jacket.
 - b) Peel the aluminum and textile layers.

The aluminum foil is a conductive screen. Do not peel more than necessary, and remove the peeled foil.

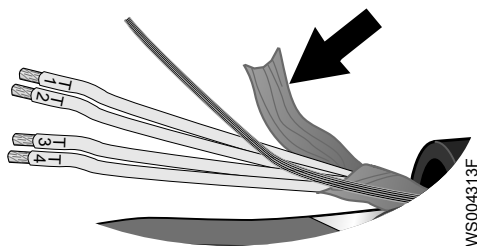


Figure 12: Aluminum foil on the control element.

- c) Put a white shrink tube over the drain wire.
- d) Twist T1+T2 and T3+T4.
- e) Put a shrink tube over the control element.

Make sure that the conductive aluminum foil and drain wire are covered.

3. Prepare the ground (earth) conductor of the SUBCAB™ cable:
 - a) Peel the yellow-green insulation from the ground (earth) conductor.
 - b) Check that the ground (earth) conductor is at least 10% longer than the phase conductors in the cabinet.
 - c) If applicable, put a cable lug on the ground conductor.
4. Prepare the ground (earth) conductor of the screened SUBCAB™ cable:
 - a) Untwist the screens around the power conductors.
 - b) Twist all power conductor screens together to create a ground (earth) conductor.
 - c) Put a yellow-green shrink tube over the ground (earth) conductor.
Leave a short piece uncovered.
 - d) Check that the connected ground (earth) conductor has sufficient slack. The conductor must stay connected even if the power conductors are pulled loose.
5. Prepare the power conductors:
 - a) Remove the aluminum foil around each power conductor.
 - b) Peel the insulation from each power conductor.
6. Prepare the ends of the ground (earth) conductor, the power conductors, and the drain wire:

Connection type	Action
Screw	Fit cable lugs to the ends.
Terminal block	Fit end sleeves or leave the ends as they are.


4.7.4 Connect the motor cable to the pump

If the motor cable is not connected already to the pump, then connect it according to this procedure.

NOTICE:

Leakage into the electrical parts can cause damaged equipment or a blown fuse. Keep the end of the motor cable dry at all times.

1. Entrance cover
2. O-ring

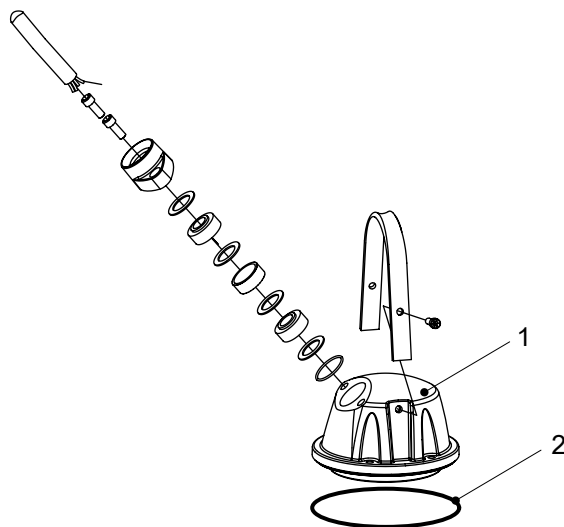

WS006002B

For more information about the cable entry, see the Parts List.

1. Remove the entrance cover and the O-ring from the stator housing.
The terminal board is accessible now.
2. Arrange the connections on the terminal board according to the required power supply.
Check the data plate to see which connections are required.
Links (jumper strips) are not used with the Y/D start.
3. Connect the mains leads: L1, L2, L3, and ground (earth). See the applicable cable chart.
The ground (earth) lead must be longer than the phase leads in the junction box of the pump. The following table shows how much extra length is required for the ground (earth) lead.

Pump	Extra length required for the ground (earth) lead	
	Millimeters	Inches
3153	100	4.0

4. Make sure that the pump is correctly connected to ground (earth).
5. Connect the control leads to the applicable terminal board.
6. Make sure that any thermal contacts incorporated in the pump are properly connected to the terminal board.
7. Install the entrance cover and the O-ring on the stator housing.
8. Fasten the screws on the entrance flange so that the cable insertion assembly bottoms out.

4.7.5 Connect the cables to the starter and monitoring equipment

If there are two power cables, then the cable that is connected to T1 and T2 is labeled. If a separate control cable is used, then the control leads in the power cable are never connected.



DANGER: Explosion/Fire Hazard

Special rules apply to installations in explosive or flammable atmospheres. Do not install the product or any auxiliary equipment in an explosive zone unless it is rated explosion-proof or intrinsically-safe. If the product is rated explosion-proof or intrinsically-safe, then see the specific explosion-proof information in the safety chapter before taking any further actions.

NOTICE:

Either thermal contacts or thermistors are incorporated in the pump.

NOTICE:

Thermal contacts must never be exposed to voltages higher than 250 V, breaking current maximum 4 A.

EN

4.7.5.1 Connect the sensor leads: MiniCAS II

1. Connect the sensor leads.

Option	Description
Thermal contacts	Connect the T1 and T2 sensor leads to the MiniCAS II.
Thermistors, screened cable	Connect the T1 and T2 sensor leads to the thermistor relay. Connect the T3 and T4 sensor leads to the MiniCAS II.
Thermistors, auxiliary cable	Connect the sensor leads 1 and 2 to the thermistor relay. Connect the sensor leads 3 and 4 to the MiniCAS II.

For more information, see [MiniCAS](#) on page 43.

2. Insulate the unused leads.

4.7.5.2 Connect the auxiliary cable: MAS 711

1. Connect the 12-lead SUBCAB cable, or the 25-lead cable, to the monitoring equipment.

For more information, see [MAS 711](#) on page 49.

2. Insulate the unused leads.

4.7.5.3 Connect the sensor leads: MAS 801

1. Connect T1 and T2 to the MAS BU.
2. Connect the functional ground to the MAS BU.
3. For Ex-applications, connect T3 and T4 from the thermal contacts or thermistors.

The stator winding temperature sensors are connected to the T3 and T4 terminals on the separate plinth.

Option	Description
Thermal contacts	Connect the thermal contacts in the contactor coil circuit so that the circuit breaks directly. Use an auxiliary relay for the thermal contact status signals.
Thermistors	Connect the leads to a SIL-approved thermistor relay.

For more information, see [MAS 801](#) on page 45.


4.7.5.4 Connect the power leads

1. Connect the mains leads (L1, L2, L3, and ground (earth)) to the starter equipment.

For information about the phase sequence and the color codes of the leads, see Cable charts.

2. Make sure that the warning label is attached to the cable end.

The label is delivered with pumps that are equipped with permanent magnet synchronous motor. If the label is missing, attach the spare label to the cable end.

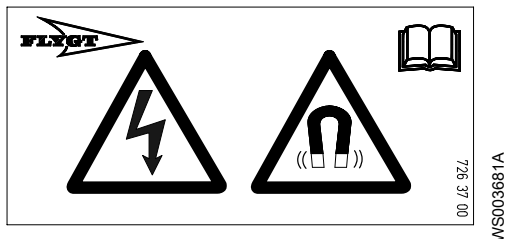

3. Check the functionality of the monitoring equipment:
 - a) Check that the signals and the tripping function work correctly.
 - b) Check that the relays, lamps, fuses, and connections are intact.
 Replace any defective equipment.

4.7.6 Cable charts

Description

This topic contains general connection information. It also provides cable charts that show connection alternatives for use with different cables and power supply.


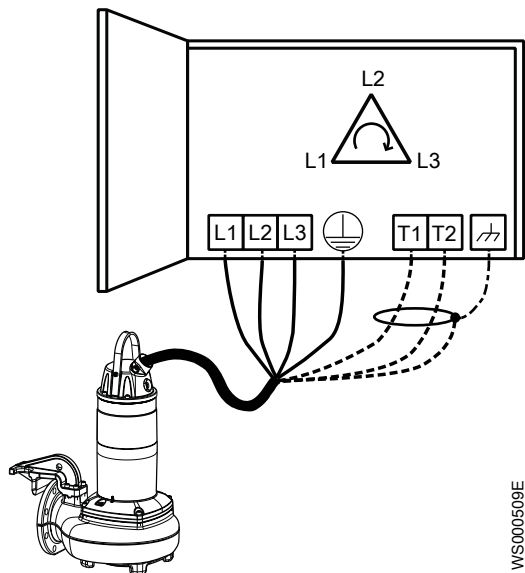


Figure 13: Phase sequence

4.7.6.1 Connection locations

The figures in this section illustrate how to interpret the connection strip symbols.

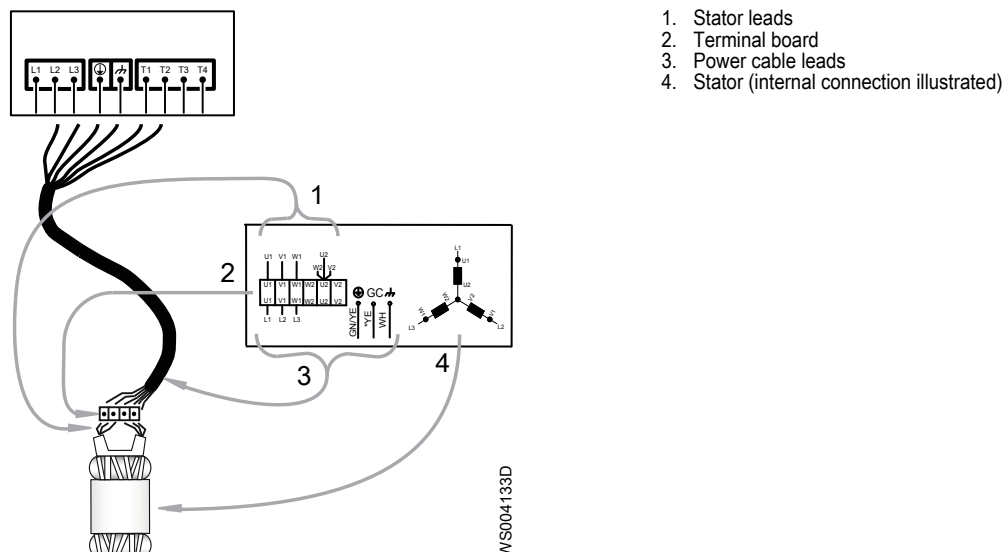

EN

4.7.6.2 Colors and markings of leads

Motor Connection		Colors and marking of the main leads				
COLOR STANDARD	STATOR LEADS	Mains 3~	SUBCAB 76X Screenflex 76X	SUBCAB 46X Screenflex 46X	SUBCAB AWG	SUBCAB Screened
BN = Brown	U1,U5 = RD	L1	BK 1	BN	RD	BN
BK = Black	U2 = GN	L2	BK 2	BK	BK	BK
WH = White	V1,V5 = BN	L3	BK 3	GY	WH	GY
OG = Orange	V2 = BU	L1	BK 4	-	-	-
GN = Green	W1,W5 = YE	L2	BK 5	-	-	-
GN/YE = Green-Yellow	W2 = BK	L3	BK 6	-	-	-
RD = Red	T1,T2 = WH or YE	⊕	GN/YE	GN/YE	GN/YE	**Screen/PE from cores
* SUBCAB AWG		⏏	Screen (WH)	Screen (WH)	-	Screen (WH)
** Ground conductor is stranded around core		GC	-	-	YE	-
GC=Ground check						

794 42 00 (REV 2)


WS004551G

Color code standard

Code	Description
BN	Brown
BK	Black
WH	White
OG	Orange
GN	Green
GNYE	Green-Yellow
RD	Red
GY	Grey
BU	Blue
YE	Yellow

4.7.6.3 Motor connection

Terminal clamps 6 stator leads

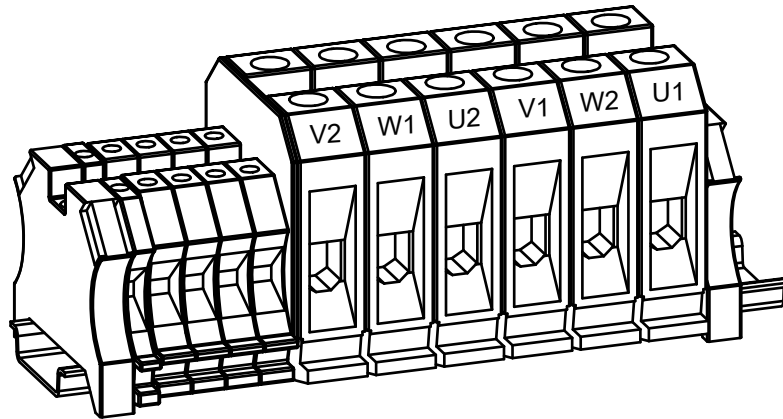

WS003903C


Figure 14: Terminal clamps, 6 stator leads

4.7.6.4 Connections included

- [6-leads connection](#) on page 40
- [9-leads connection](#) on page 42
- [Screened cable connection](#) on page 42

6-leads connection

One cable (left) and two cables (right) Y-connection. For 3153, only the one-cable diagram applies.

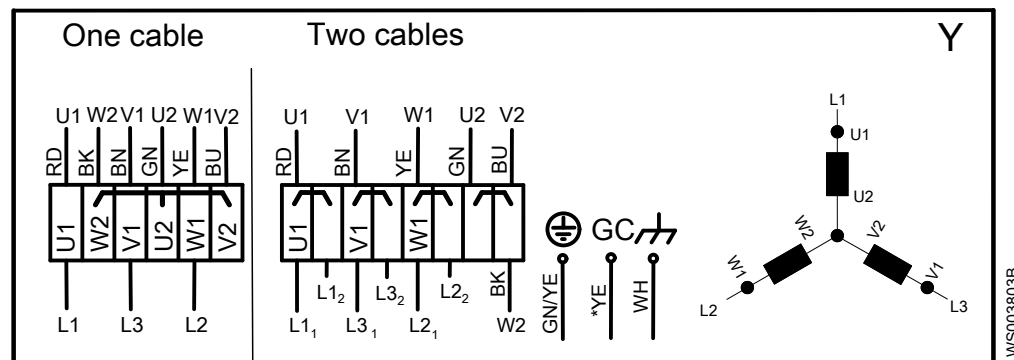

WS003803B

Figure 15: Y-connection

One cable (left) and two cables (right) D-connection. For 3153, only the one-cable diagram applies.

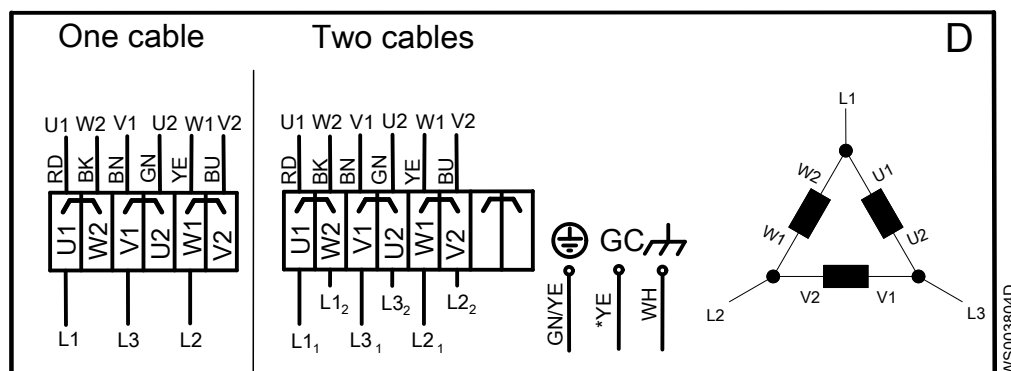


Figure 16: D-connection

One cable (left) and two cables (right) Y/ D-connection. For 3153, only the one-cable diagram applies.

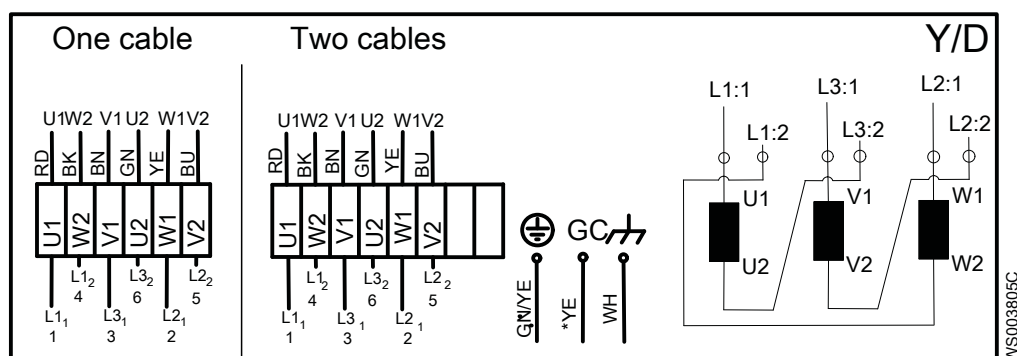


Figure 17: Y/D-connection

Y and D-connection, only applicable to 70 mm² terminal clamp.

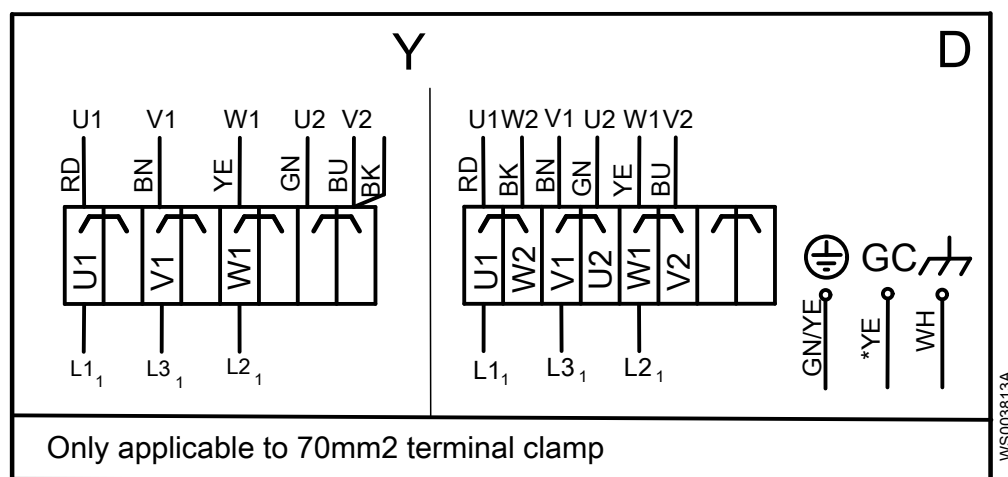


Figure 18: Y or D-connection

9-leads connection

One cable (left) and two cables (right) Y-parallel connection. For 3153, only the one-cable diagram applies.

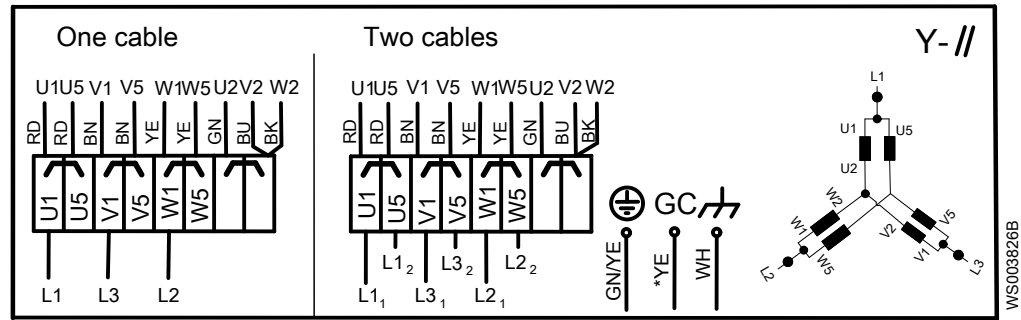


Figure 19: Y-parallel connection

One cable (left) and two cables (right) Y-serial connection. For 3153, only the one-cable diagram applies.

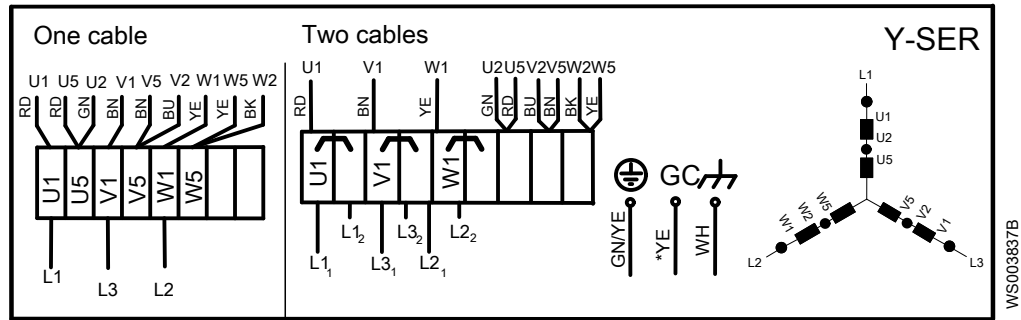


Figure 20: Y-serial connection

Screened cable connection

Cable without separate ground conductor. Screen as ground conductor.

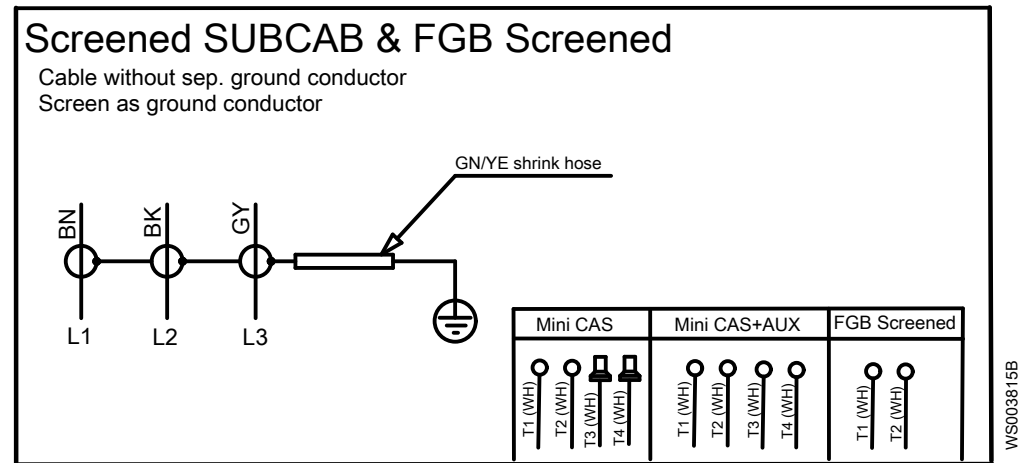


Figure 21: Screened SUBCAB and FGB Screened

* For screened SUBCAB T3 and T4 shall also be twisted separately.

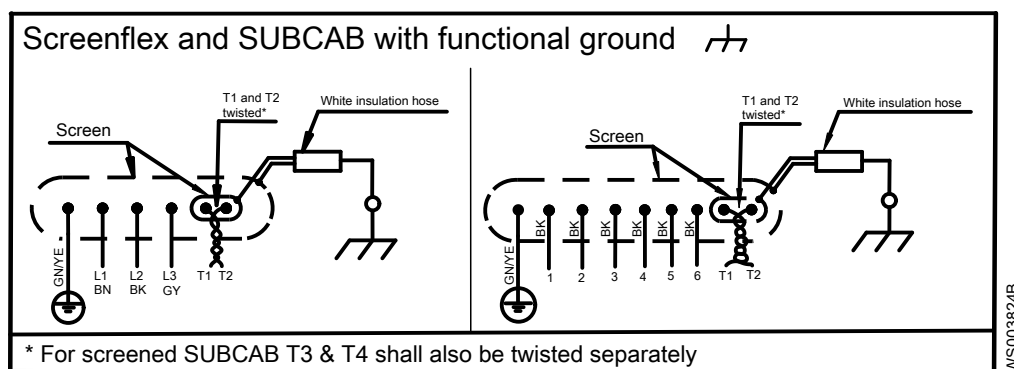


Figure 22: Screenflex and SUBCAB with functional ground

4.7.7 MiniCAS

Color and marking of control leads			
Control	SUBCAB 4GX/7G and Screenflex	SUBCAB AWG	SUBCAB Screened
T1	WH T1	OG	WH T1
T2	WH T2	BU	WH T2
T3	-	-	WH T3
T4	-	-	WH T4

WS003843B

Figure 23: Colors and markings of control leads


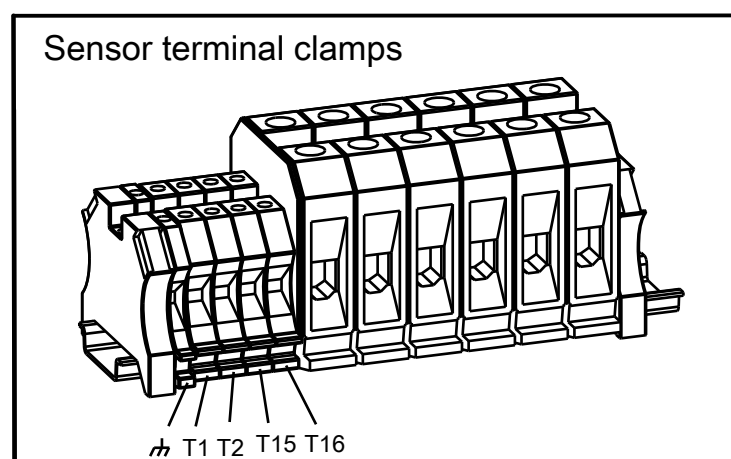


Figure 24: Sensor terminal clamps


FLS10 and thermal contacts

EN

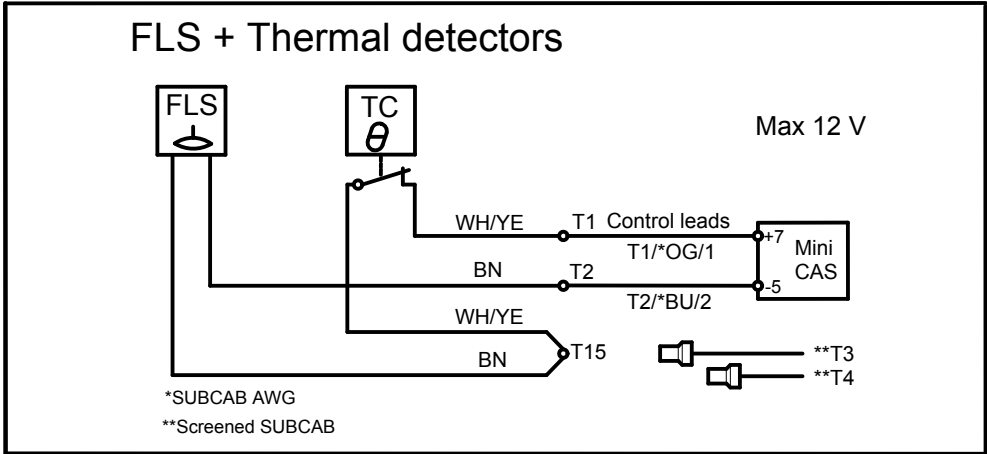


Value	Description
∞ ohm	Overtemperature
1200 ohm	OK
430 ohm	Leakage

FLS10 and thermistor

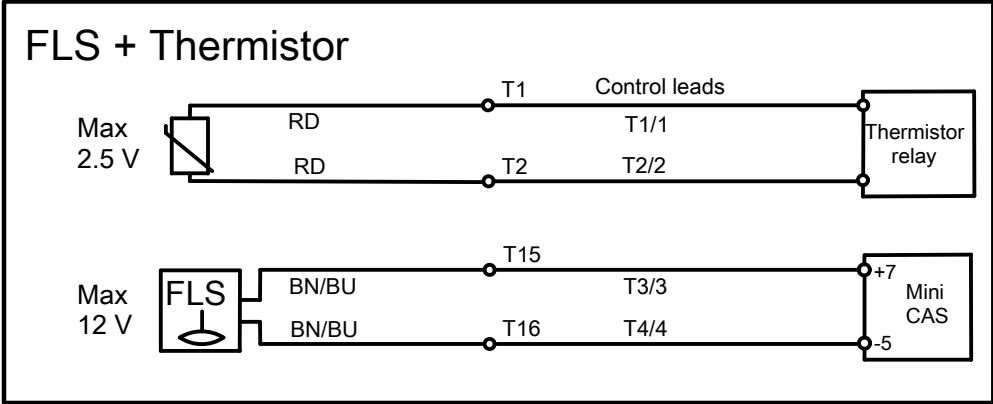


Value	Description
$R \leq 100$ ohm	$T=25^{\circ}\text{C}$ (77°F)
$R \leq 550$ ohm	$T=135^{\circ}\text{C}$ (275°F) ($T_{\text{REF}} -5^{\circ}\text{C}$ (23°F))
$R \leq 1330$ ohm	$T=145^{\circ}\text{C}$ (293°F) ($T_{\text{REF}} +5^{\circ}\text{C}$ (41°F))

Thermal contacts, FLS disconnected

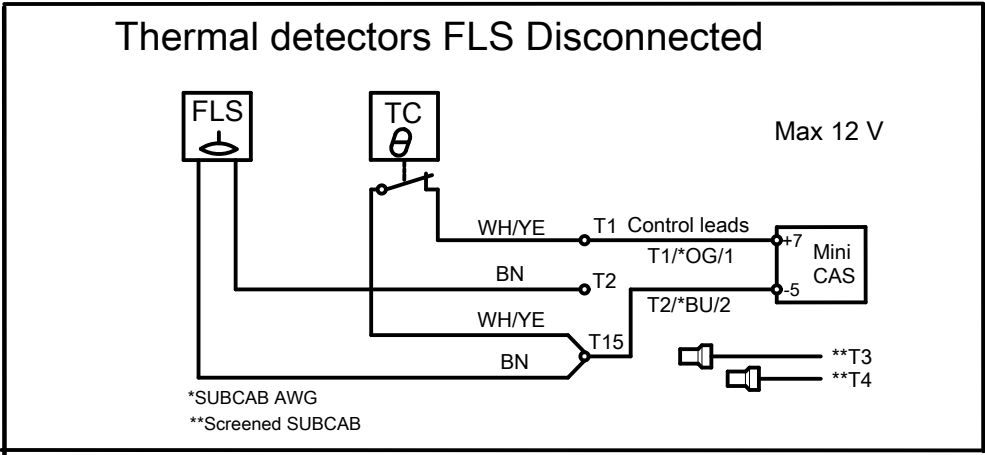


4.7.8 MAS 801

Table 3: PEM connections, standard application

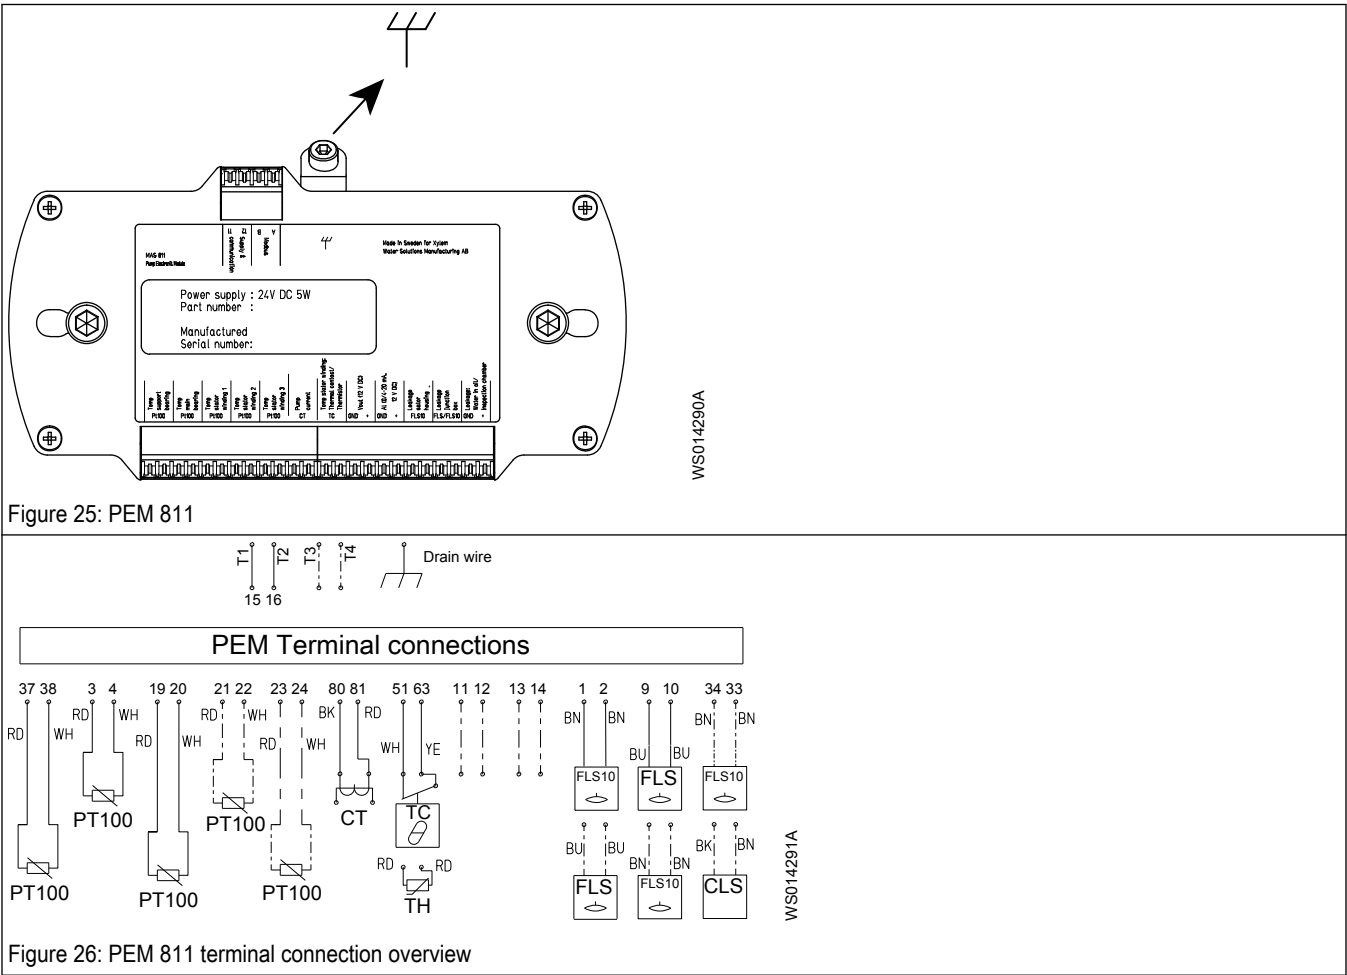


EN

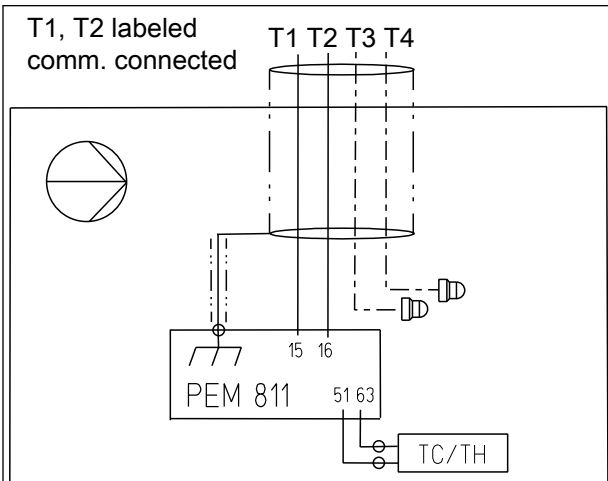

WS014292A


Figure 27: Single cable

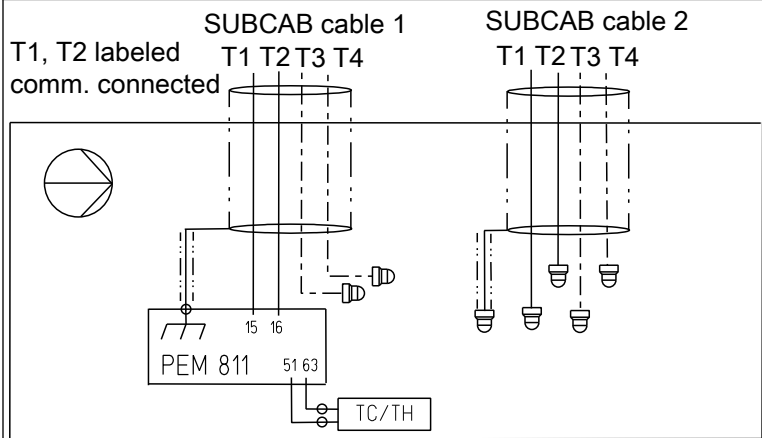

WS014293A

Figure 28: Two cables

Table 4: PEM connections, Ex-proof application

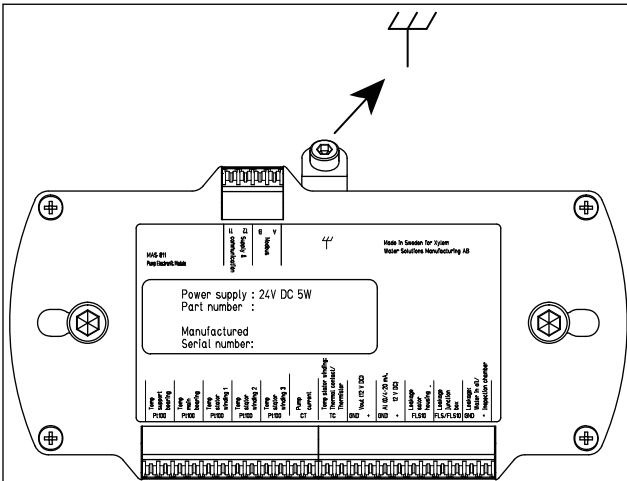

WS014290A

Figure 29: PEM 811

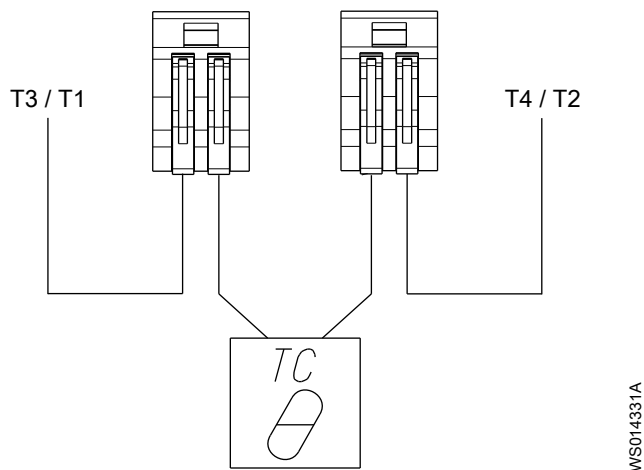


Figure 30

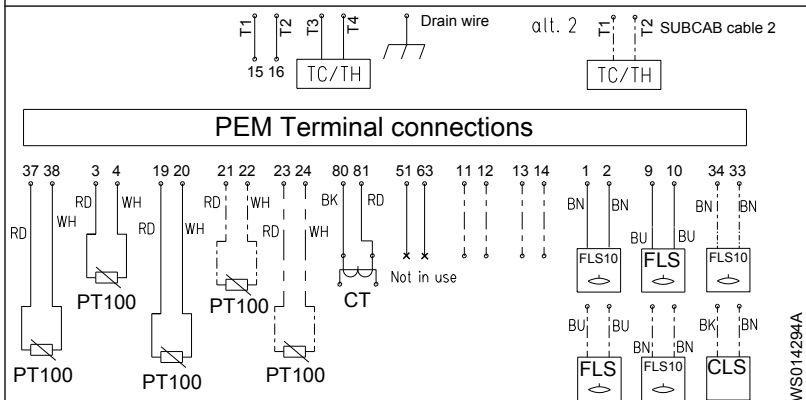


Figure 31: PEM 811 terminal connection overview


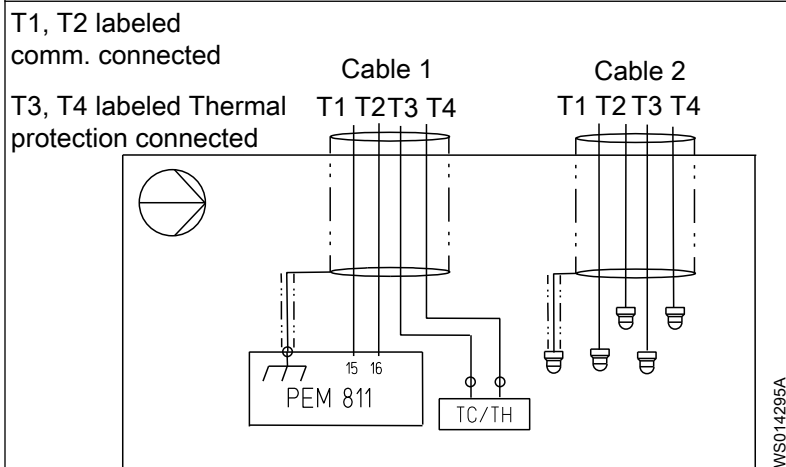



Figure 32: One or two screened SUBCAB™ cables

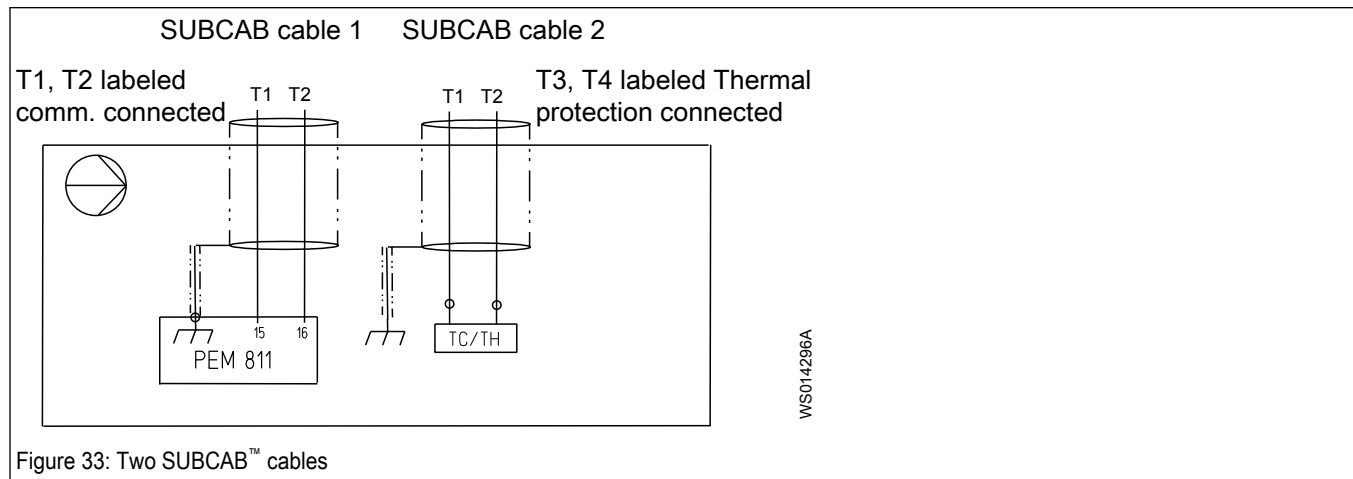

37, 38	Pt100 temperature sensor Support bearing
3, 4	Pt100 temperature sensor Main bearing
19, 20	Pt100 temperature sensor Stator winding 1
21, 22	Pt100 temperature sensor Stator winding 2
23, 24	Pt100 temperature sensor Stator winding 3
80, 81	CT Pump current
51, 63	Thermal contact or thermistor, TC Stator winding Not used for Ex-pumps
11, 12	V _{out} +12 VDC, GND
13, 14	Analog input 0/4–20 mA +12 VDC, GND
1, 2	FLS/FLS10 Leakage, inspection chamber, or stator housing
9, 10	FLS/FLS10 Leakage, junction box
34, 33	FLS10, Leakage, inspection chamber CLS, Water in oil
15	T1 Power supply and communication
16	T2 Power supply and communication
17	B Modbus
18	A Modbus


4.7.9 MAS 711

EN

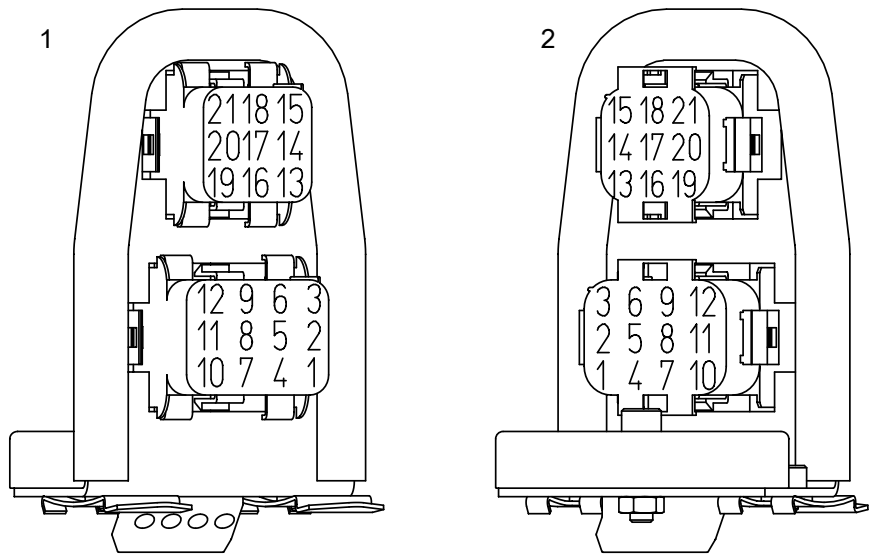


WS00113A

- 1. Electric connection, sensor cables
- 2. Electric connection, 12-lead cable

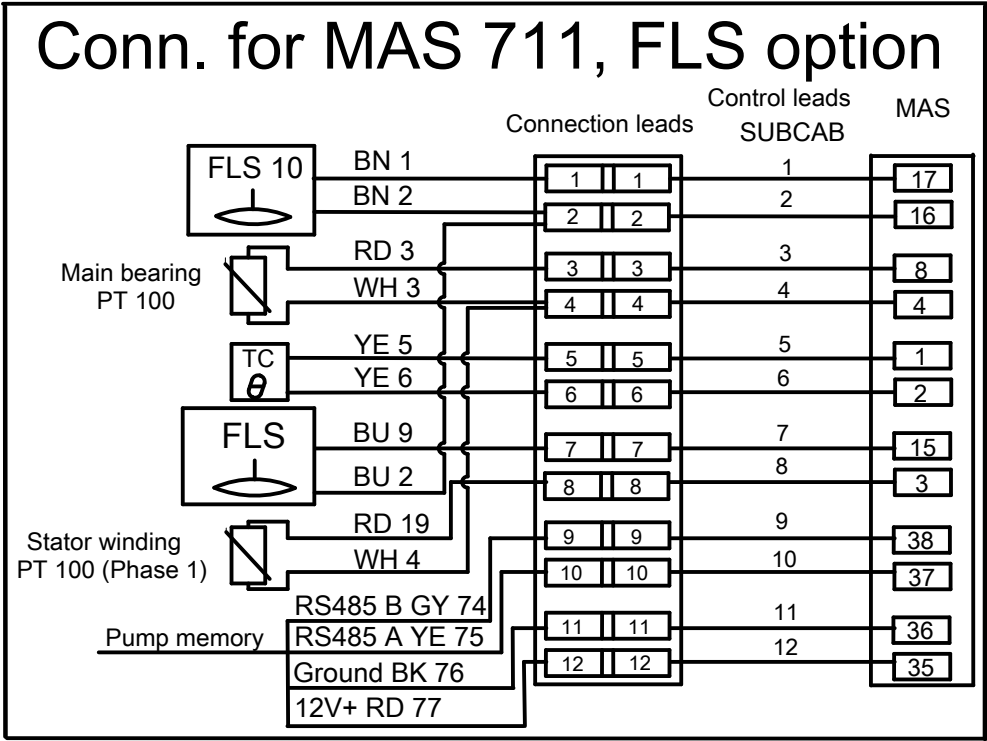


WS00382B

Conn. for MAS 711, VIS 10 option

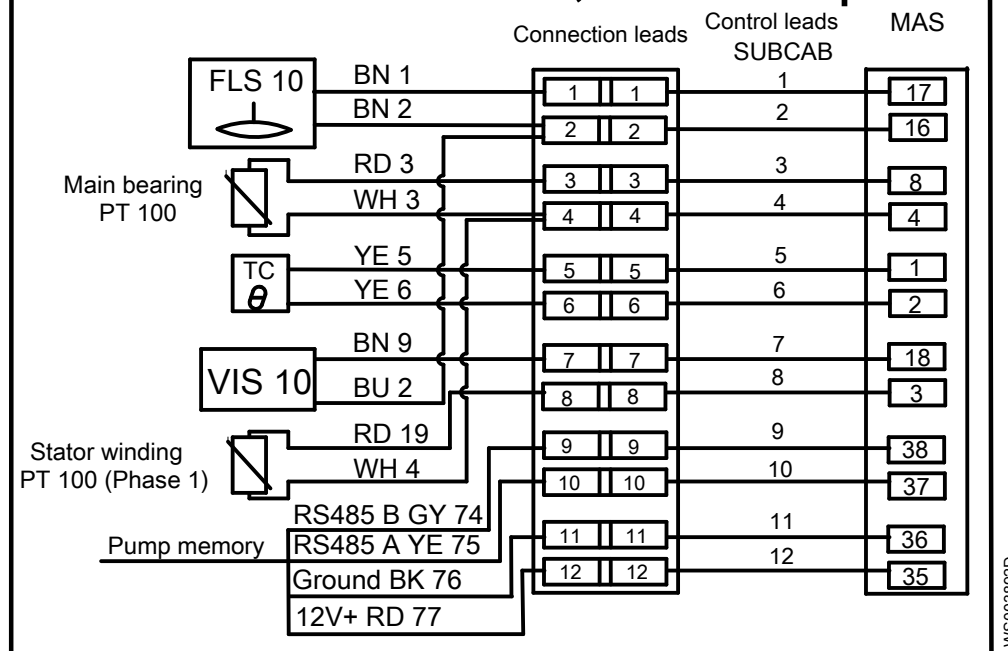

4.8 T-installation: Bleed air before starting pump

1. Open the valve on the air vent line and bleed out the air. See the following figure.

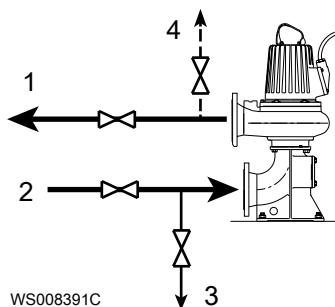

1. Outlet line
2. Inlet line
3. Line to drain
4. Air vent

Figure 34: T-installation

2. Close the valve on the air vent line before the pump is started.


4.9 Check the impeller rotation



CAUTION: Crush Hazard

The starting jerk can be powerful. Make sure nobody is close to the unit when it is started.

1. Start the motor.
2. Stop the motor after a few seconds.
3. Check that the impeller rotates according to this illustration.

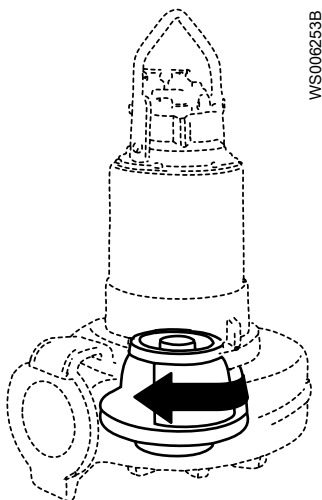

The correct direction of impeller rotation is clockwise when you look at the pump from above.

4. If the impeller rotates in the wrong direction, then transpose two phase leads (3-phase) and do this procedure again.

5 Operation

5.1 Precautions

Before taking the unit into operation, check the following:

- All recommended safety devices are installed.
- The cable and cable entry have not been damaged.
- All debris and waste material has been removed.

NOTICE:

Never operate the pump with the discharge line blocked, or the discharge valve closed.



WARNING: Crush Hazard

Risk of automatic restart.

Distance to wet areas



WARNING: Electrical Hazard

Risk of electrical shock or burn. You must connect an additional ground- (earth-) fault protection device to the grounded (earthed) connectors if persons are likely to come into contact with liquids that are also in contact with the pump or pumped liquid.



CAUTION: Electrical Hazard

Risk of electrical shock or burn. The equipment manufacturer has not evaluated this unit for use in swimming pools. If used in connection with swimming pools then special safety regulations apply.

Noise level

NOTICE:

The sound power level of the product is lower than 70 dB(A). However, in some installations the resulting sound pressure level may exceed 70 dB(A) at certain operating points on the performance curve. Make sure that you understand the noise level requirements in the environment where the product is installed. Failure to do so may result in hearing loss or violation of local laws.

5.2 Estimate zinc anode replacement intervals

The mass and surface area of the zinc anodes are designed to protect the pump surface for 1 year in sea water with an average temperature of 20°C (68°F). Shorter inspection intervals and anode replacement can be required, depending upon the water temperature and the chemical composition as well as the presence of other metals in the vicinity of the pump.

The rate of zinc consumption, and the appropriate inspection intervals, can be estimated by measuring how much zinc is consumed during the first two months following installation.

Anodes are replaced when the anode mass is reduced to a selected fraction of its initial mass. The recommended interval for the selection fraction is 0.25–0.50 (25–50%).

1. Remove, weigh, and reinstall one or more of the exterior zinc anodes before starting up the pump.
2. After two months, remove and weigh the same zinc anode or anodes again.
3. Divide the lapsed time in days (between steps 1 and 2) by the anode weight loss in grams to get the calculated anode consumption rate (days/gram).

If multiple anodes were weighed, then use the anode which has lost the most weight for this calculation.

4. Calculate future replacement intervals so that they occur when the selected fraction of zinc is remaining.

5.3 Start the pump

EN



CAUTION: Crush Hazard

The starting jerk can be powerful. Make sure nobody is close to the unit when it is started.



CAUTION: Thermal Hazard

The surfaces or parts of the unit may become hot during operation. Allow surfaces to cool before starting work, or wear heat-protective clothing.

NOTICE:

Make sure that the rotation of the impeller is correct. For more information, see Check the impeller rotation.

1. Remove the fuses or open the circuit breaker, and check that the impeller can rotate freely.



WARNING: Crush Hazard

Never put your hand into the pump housing.

2. Conduct insulation test phase to ground. To pass, the value must exceed 5 megaohms.
3. Check that the monitoring equipment works.
4. 3153.8xx with LSPM motor: Make the correct relay settings depending on starting method.

Starting method	Recommended	Relay settings
Direct on-line	Recommended	—
Star-delta	—	Set the relay time in the star-delta equipment to 3 seconds. The relay time prevents increased motor temperature and vibrations.
Soft starter	—	Set the ramp-up time to maximum 3 seconds.
Variable frequency drive (VFD)	Recommended for lower starting current	—

5. Start the pump.

6 Maintenance

6.1 Precautions



Before starting work, make sure that the safety instructions have been read and understood.

DANGER: Crush Hazard

Moving parts can entangle or crush. Always disconnect and lock out power before servicing to prevent unexpected startup. Failure to do so could result in death or serious injury.



DANGER: Inhalation Hazard

Before entering the work area, make sure that the atmosphere contains sufficient oxygen and no toxic gases.



WARNING: Biological Hazard

Infection risk. Rinse the unit thoroughly with clean water before working on it.



CAUTION: Crush Hazard

Make sure that the unit cannot roll or fall over and injure people or damage property.

Make sure that you follow these requirements:

- Check the explosion risk before you weld or use electrical hand tools.
- Allow all system and pump components to cool before you handle them.
- Make sure that the product and its components have been thoroughly cleaned.
- Before starting work, make sure that the work area is well-ventilated.
- Do not open any vent or drain valves or remove any plugs while the system is pressurized. Make sure that the pump is isolated from the system and that pressure is relieved before you disassemble the pump, remove plugs, or disconnect piping.

Ground continuity verification

A ground (earth) continuity test must always be performed after service.

6.2 Maintenance guidelines

During the maintenance and before reassembly, always remember to perform these tasks:

- Clean all parts thoroughly, particularly O-ring grooves.
- Change all O-rings, gaskets, and seal washers.
- Lubricate all springs, screws, O-rings with grease.

During the reassembly, always make sure that existing index markings are in line.

The reassembled drive unit must always be insulation-tested and the reassembled pump must always be test-run before normal operation.

6.3 Torque values

All screws and nuts must be lubricated to achieve correct tightening torque. Screws that are screwed into stainless steel must have the threads coated with applicable lubricants to prevent seizing.

If there is a question regarding the tightening torques, then contact a sales or authorized service representative.

Screws and nuts

Table 5: Stainless steel, A2 and A4, torque Nm (lbf-ft)

Property class	M4	M5	M6	M8	M10	M12	M16	M20	M24	M30
50	1.0 (0.74)	2.0 (1.5)	3.0 (2.2)	8.0 (5.9)	15 (11)	27 (20)	65 (48)	127 (93.7)	220 (162)	434 (320)
70, 80	2.7 (2)	5.4 (4)	9.0 (6.6)	22 (16)	44 (32)	76 (56)	187 (138)	364 (268)	629 (464)	1240 (915)
100	4.1 (3)	8.1 (6)	14 (10)	34 (25)	66 (49)	115 (84.8)	248 (183)	481 (355)	—	—

Table 6: Steel, torque Nm (lbf-ft)

Property class	M4	M5	M6	M8	M10	M12	M16	M20	M24	M30
8.8	2.9 (2.1)	5.7 (4.2)	9.8 (7.2)	24 (18)	47 (35)	81 (60)	194 (143)	385 (285)	665 (490)	1310 (966.2)
10.9	4.0 (2.9)	8.1 (6)	14 (10)	33 (24)	65 (48)	114 (84)	277 (204)	541 (399)	935 (689)	1840 (1357)
12.9	4.9 (3.6)	9.7 (7.2)	17 (13)	40 (30)	79 (58)	136 (100)	333 (245)	649 (480)	1120 (825.1)	2210 (1630)

Table 7: Brass, torque Nm (lbf-ft)

M5	M8	M10
2.7 (2.0)	11 (8.1)	22 (16.2)

Hexagon screws with countersunk heads

For hexagon socket head screws with countersunk head, maximum torque for all property classes must be 80% of the values for property class 8.8.

Round nuts with set screws

Table 8: Set screw, torque Nm (lbf-ft)

The torque values are only valid for the set screw, and not for the round nut.

M8	M10
18 (13)	35 (26)

6.4 Change the coolant

This image shows the plugs that are used to change the coolant.

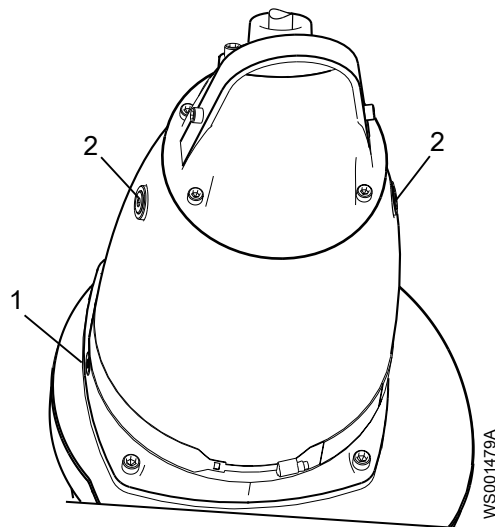


Figure 35: With a cooling jacket

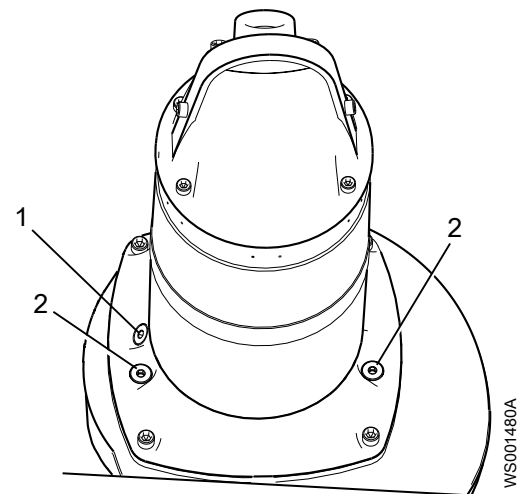


Figure 36: Without a cooling jacket

1. Inspection plug
2. Coolant plugs

6.4.1 Empty the coolant



CAUTION: Compressed Gas Hazard

Air inside the chamber may cause parts or liquid to be propelled with force. Be careful when opening. Allow the chamber to de-pressurize before removal of the plug.

1. Empty the coolant in the inspection chamber:
 - a) Remove the inspection plug.

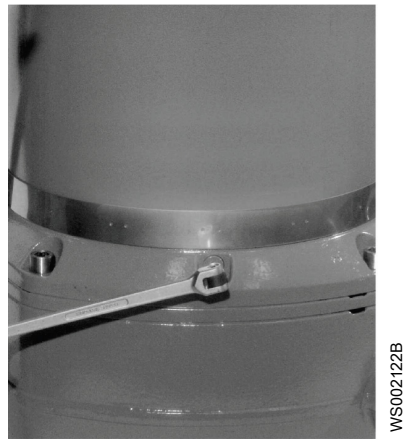


Figure 37: With a cooling jacket

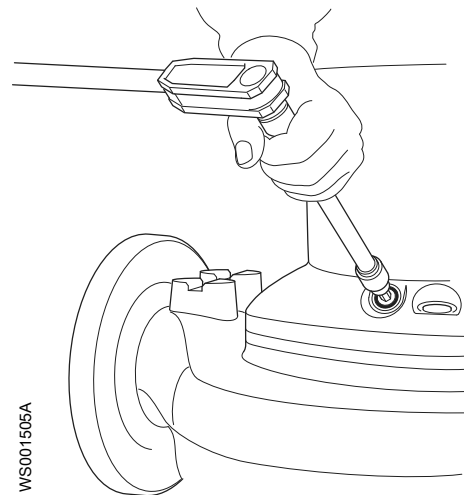


Figure 38: Without a cooling jacket

- b) Pump out any coolant from the inspection chamber, as shown here.

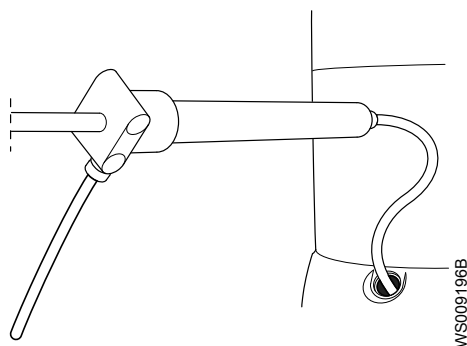


Figure 39: With a cooling jacket

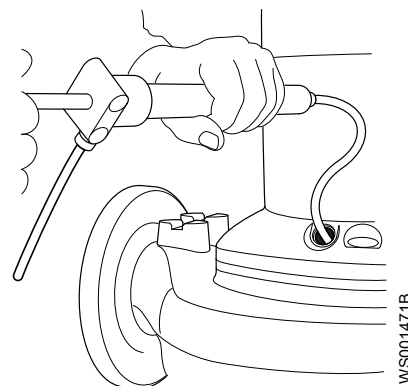


Figure 40: Without a cooling jacket

- c) Fit a new O-ring and reinstall the inspection plug. Tighten the plug.

Tightening torque: 44 Nm (33 lbf·ft)

2. To empty the coolant with the pump upright, do the following:

This method is applicable only for pumps without cooling jackets.


- a) Remove the coolant plugs.



CAUTION: Compressed Gas Hazard

Air inside the chamber may cause parts or liquid to be propelled with force. Be careful when opening. Allow the chamber to de-pressurize before removal of the plug.

- b) Use a pump to remove the coolant.

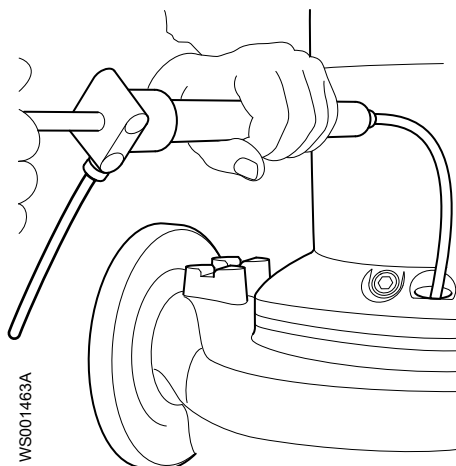

3. If it is necessary to separate the drive unit from the hydraulic unit, then do the following:

- a) Carefully open the coolant plugs to release any built-up pressure inside the cooling jacket.



CAUTION: Compressed Gas Hazard

Air inside the chamber may cause parts or liquid to be propelled with force. Be careful when opening. Allow the chamber to de-pressurize before removal of the plug.

- b) After releasing any built-up pressure in the cooling jacket, reinstall the coolant plugs.
 c) Remove the pump housing screws.
 d) Remove the drive unit from the pump housing.

EN

NOTICE:

Do not allow the weight of the pump to rest on any portion of the impeller. The impeller must not be allowed to make contact with the concrete floor or other hard or rough surfaces.

4. To empty the coolant by using the pump in a horizontal position, do the following:
- a) Put the pump horizontally, so that one of the coolant plugs is at the lowest point of the pump.
It is important that the coolant drains completely.
 - b) Put a container under the pump.
 - c) Remove the coolant plugs and empty the coolant.

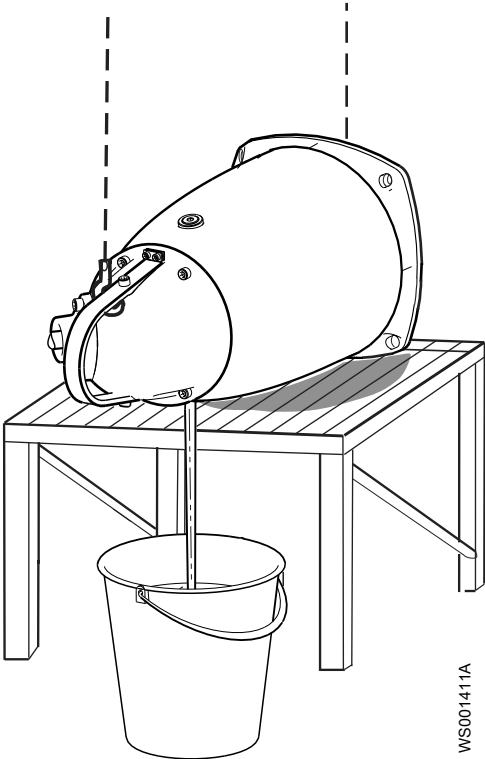


Figure 41: With a cooling jacket

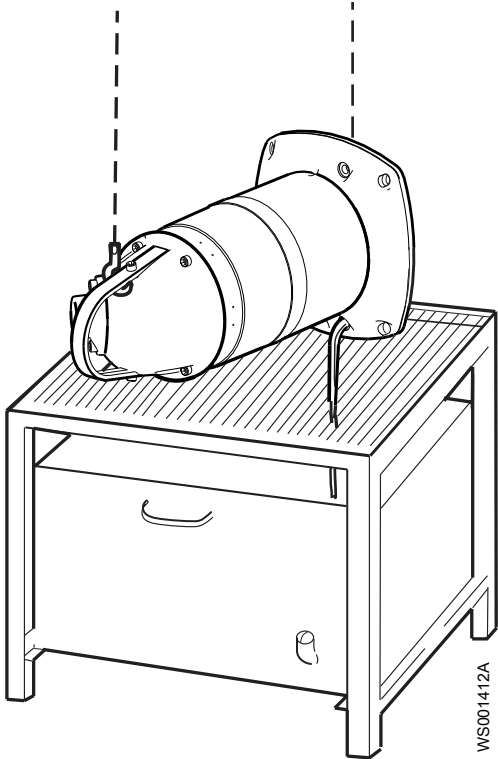


Figure 42: Without a cooling jacket

6.4.2 Fill with coolant

Use a coolant that is a mixture of 70% deionized or distilled water, and 30% DOWCAL 200E monopropylene glycol. If DOWCAL 200E from Dow Chemical Company is not available, then contact your local Xylem representative. The monopropylene glycol must fulfill the Xylem material standard M0800.82.0002.

NOTICE:

Deionized or distilled water must be used in the water-glycol mixture.

If the pumped liquid includes potable water or substances to be ingested, then contact a sales or authorized service representative.

1. Fill with coolant until it overflows through the opposite hole, as shown here.

Pump	Quantity, L (qt.)	
	With cooling jacket	Without cooling jacket
3153	10. (10.5)	2.2 (2.3)

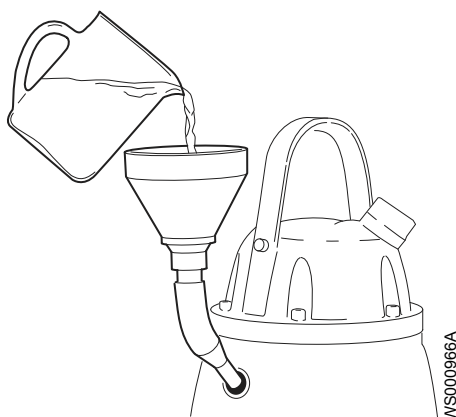


Figure 43: With cooling jacket

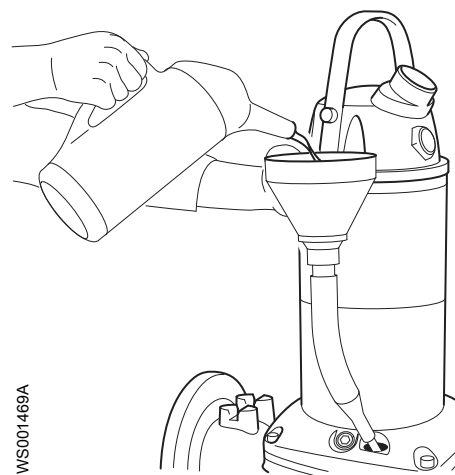


Figure 44: Without cooling jacket

2. Fit new O-rings and reinstall the coolant plugs. Tighten the plugs.
Tightening torque: 44 Nm (33 lbf-ft)

6.5 Service the pump

Type of maintenance	Purpose	Inspection interval
Initial inspection	A Xylem-authorized personnel checks the pump condition. From the results, the personnel recommends the intervals for the periodical inspection and overhaul for the installation.	Within the first year of operation.
Periodical inspection	The inspection prevents operational interruptions and machine breakdowns. The measures to increase performance and pump efficiency are decided for each application. They can include such things as impeller trimming, wear part control and replacement, control of zinc-anodes and control of the stator.	Up to 12,000 hours or three years, whichever comes first. Applies to normal applications and operating conditions at media (liquid) temperatures <40°C (104°F).
Overhaul	The overhaul lengthens the operating lifetime of the product. It includes the replacement of key components and the measures that are taken during an inspection.	Up to 24,000 hours or six years, whichever comes first. Applies to normal applications and operating conditions at media (liquid) temperatures <40°C (104°F).

NOTICE:

Shorter intervals may be required when the operating conditions are extreme, for example with very abrasive or corrosive applications or when the liquid temperatures exceed 40°C (104°F).

6.5.1 Inspection

Service item	Action
Cable	1. If the outer jacket is damaged, then replace the cable. 2. Check that the cables do not have any sharp bends and are not pinched.
Connection to power	Check that the connections are properly secured.
Electrical cabinets	Check that they are clean and dry.

Service item	Action
Impeller	1. Check the impeller clearance. 2. Adjust the impeller, if necessary.
Inspection chamber	1. Drain all liquid, if any. 2. Check the resistance of the leakage sensor. Normal value approximately 1200 ohms, alarm approximately 430 ohms.
Insulation	Use a megger maximum 1000 V. 1. Check that the resistance between the ground (earth) and phase lead is more than 5 megohms. 2. Conduct a phase-to-phase resistance check.
Junction box	Check that it is clean and dry.
Level regulators	Check the condition and functionality.
Lifting device	Check that the local safety regulations are followed.
Lifting handle	1. Check the screws. 2. Check the condition of the lifting handle and the chain. 3. If necessary, replace.
O-rings	1. Replace the oil plug O-rings. 2. Replace the O-rings at the entrance or junction cover. 3. Grease the new O-rings.
Overload protection and other protections	Check the correct settings.
Personnel safety devices	Check the guard rails, covers, and other protections.
Rotation direction	Check the impeller rotation.
Seal housing	1. Fill with new coolant, if necessary. Applicable for Ex-version. 2. Check that the freezing point is lower than -13°C (9°F).
Terminal board	Check that the connections are properly secured.
Temperature sensors: – Thermal contact – Thermistor – Pt100	If the pump is connected to the MAS 801 or MAS 711, then it is recommended that the sensors be checked in the MAS unit. Otherwise, use a multimeter. Do not use a device applying a higher voltage than 2.5 V. 1. Disconnect the sensor leads. 2. Measure the resistance to check the status of the sensor and leads according to values in Make the electrical connections on page 32. Make sure to select values for the appropriate sensor, monitoring equipment, and sensor combination. 3. Measure between each sensor lead to ground (earth) to establish that the resistance is infinite (or at least several Megaohm).
Voltage and amperage	Check the running values.

6.5.2 Overhaul

The basic repair kit includes O-rings, seals, and bearings.

For an overhaul, do the following in addition to the tasks listed under Inspection.

Service item	Action
Support and main bearing	Replace the bearings with new bearings.
Mechanical seal	Replace with new seal units.

6.5.3 Service in case of alarm

For information about indication values for sensors, see [Make the electrical connections](#) on page 32.

Alarm source	Action
FLS10	1. Drain the fluid in the inspection chamber. 2. Check the coolant level. Fill with new coolant if necessary. 3. Check the freezing point (lower than -13°C or 9°F). Check the inspection chamber again after one week of operation. If leakage has occurred, then do the following: 1. Drain the fluid. 2. Change the mechanical seal unit. 3. Replace with new coolant.
The thermistor/Thermal contact	1. Check the coolant level (pump with cooling jacket). 2. Check the start and stop levels.
The overload protection	Check that the impeller can rotate freely.

6.6 Replace the impeller

Required tools:

- 12 mm hexagon bit adapter with an extension of at least a 100 mm (4 in)
- Rod (wood or plastic) for locking the impeller in place



CAUTION: Cutting Hazard

Worn parts can have sharp edges. Wear protective clothing.

NOTICE:

When laying the pump on its side, do not allow the weight of the pump to rest on any portion of the impeller. The impeller must not be allowed to make contact with the concrete floor or other hard and rough surfaces.

NOTICE:

If you fail with the impeller installation, you must redo the installation procedure from the beginning.

6.6.1 Replace the impeller for wet installation


6.6.1.1 Remove the impeller: wet installation




CAUTION: Cutting Hazard

Sharp edges. Wear protective clothing.


1. Place the pump in a horizontal position.
2. Remove the impeller:
 - a) Remove the flush valve cover and its O-ring.
 - b) Lock the impeller in place by inserting a rod through the hole.
 - c) Remove the impeller screw.

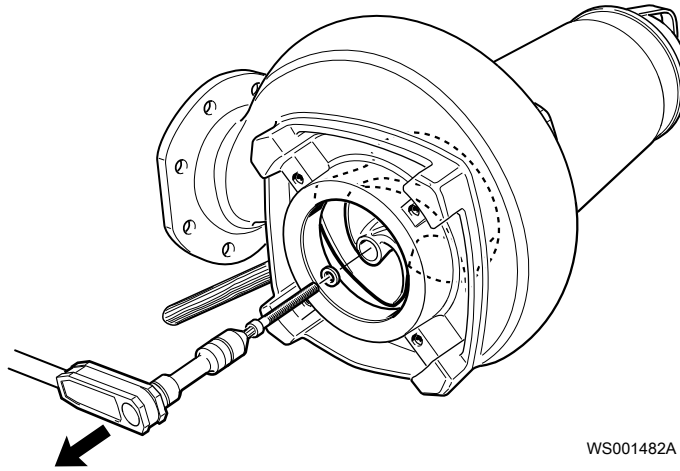


- d) Turn the adjustment screw counterclockwise until the impeller breaks free from the shaft.

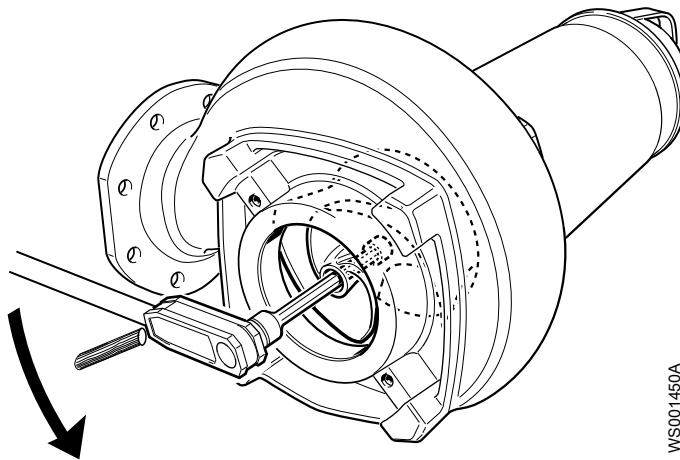

- e) Hand-tighten the impeller screw to prevent it from falling off.

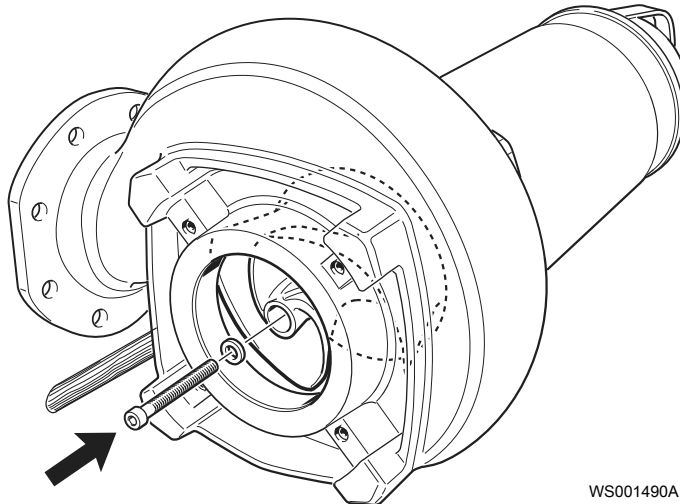

- f) Remove the rod.
3. Raise the pump.
4. Remove the drive unit from the pump housing:
- a) Remove the pump housing screws.

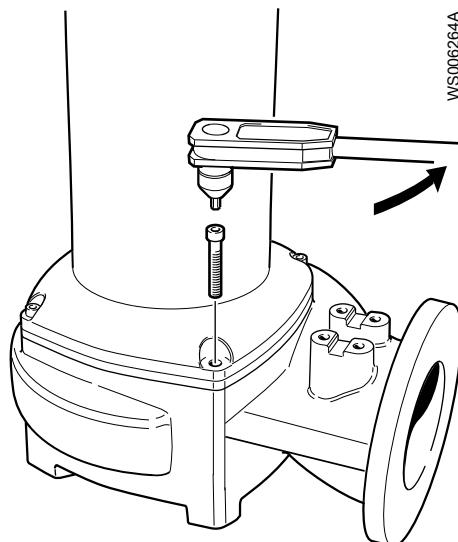

- b) Remove the drive unit from the pump housing.




WARNING: Crush Hazard

Always lift the unit by its designated lifting points.

Use suitable lifting equipment and ensure that the product is properly harnessed.

Wear personal protective equipment.

Stay clear of cables and suspended loads.

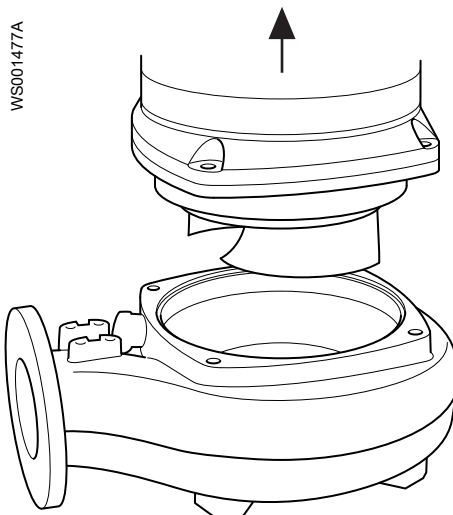



5. Remove the impeller:



CAUTION: Cutting Hazard

Sharp edges. Wear protective clothing.

- a) Place the drive unit horizontally.
b) Remove the impeller screw.

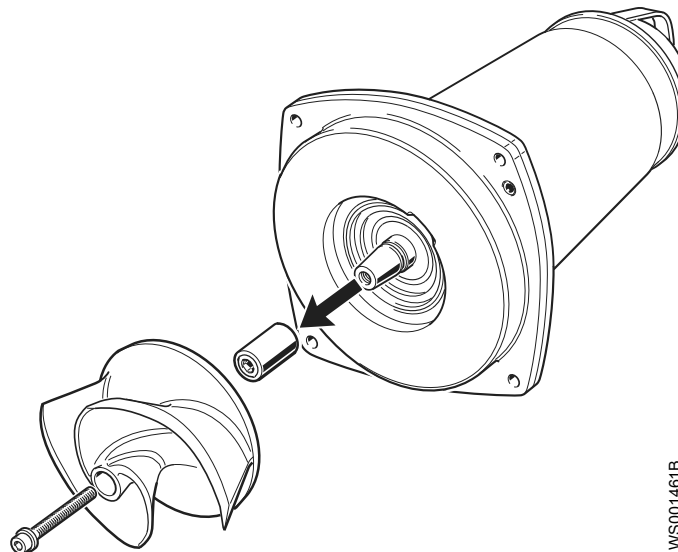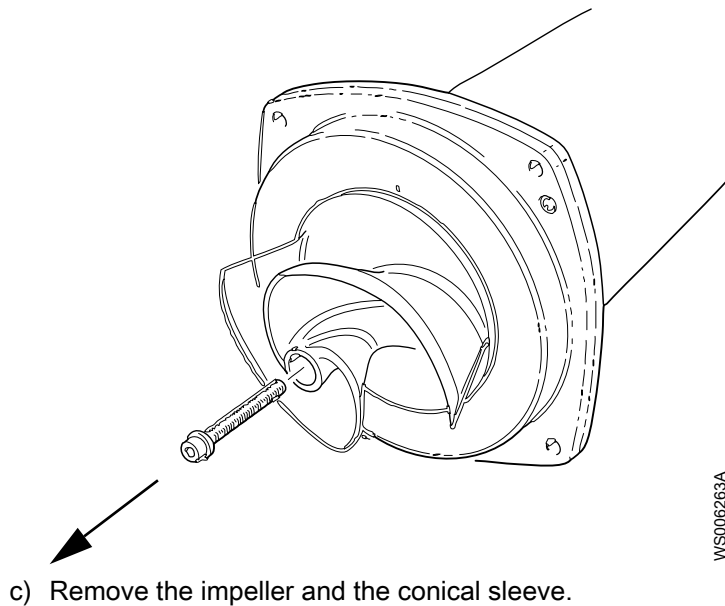

6.6.1.2 Install the impeller: wet installation

1. Prepare the shaft:

- a) Polish off any flaws by using a fine emery cloth.


The end of the shaft must be clean and free from burrs.

- b) Coat the inner conical, the outer cylindrical surfaces, and the thread of the conical sleeve with a thin layer of grease.

The correct lubrication is grease for bearings, for example Exxon Mobil Unirex N3, Mobil Mobilith SHC 220 or equivalent.


NOTICE:

Surplus grease can cause the impeller to become loose. Remove surplus grease from conical and/or cylindrical surfaces of shafts and/or sleeves.

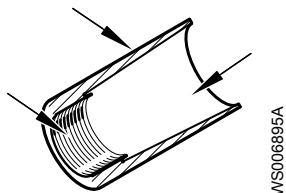


2. Mount the impeller:


- a) Lubricate the threads of the impeller screw and the washer.
Always use a new impeller screw.
- b) Adjust the adjustment screw so that it is flush with the sleeve.

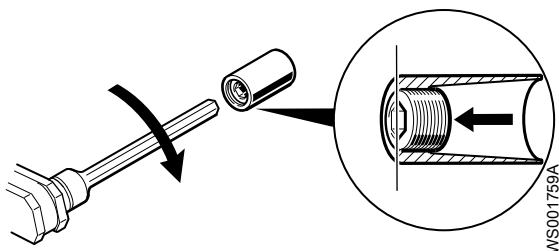

- c) Fit the sleeve and impeller to the shaft.
- d) Hand-tighten the impeller screw to prevent it from falling off.

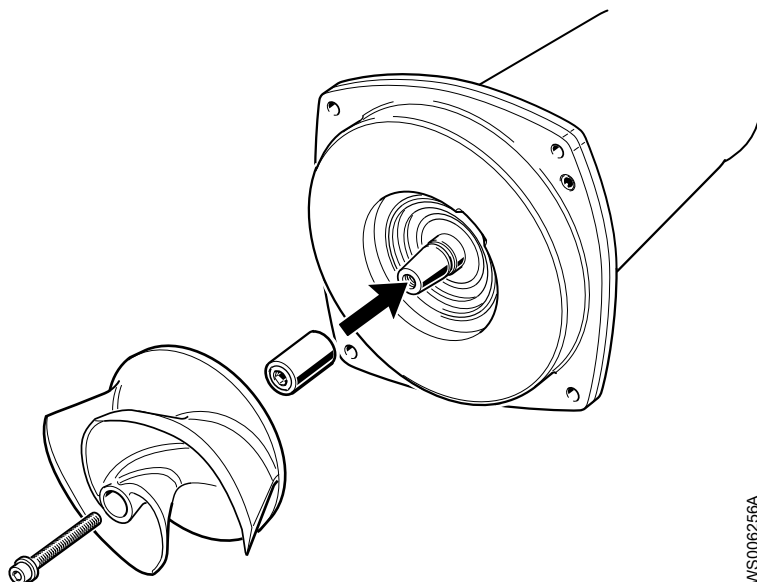


3. If applicable, check that the clearance between the impeller and the insert ring is maximum 1 mm (0.04 in) radial. If not, send the pump for service.
The insert ring is pressed into the seal housing cover.

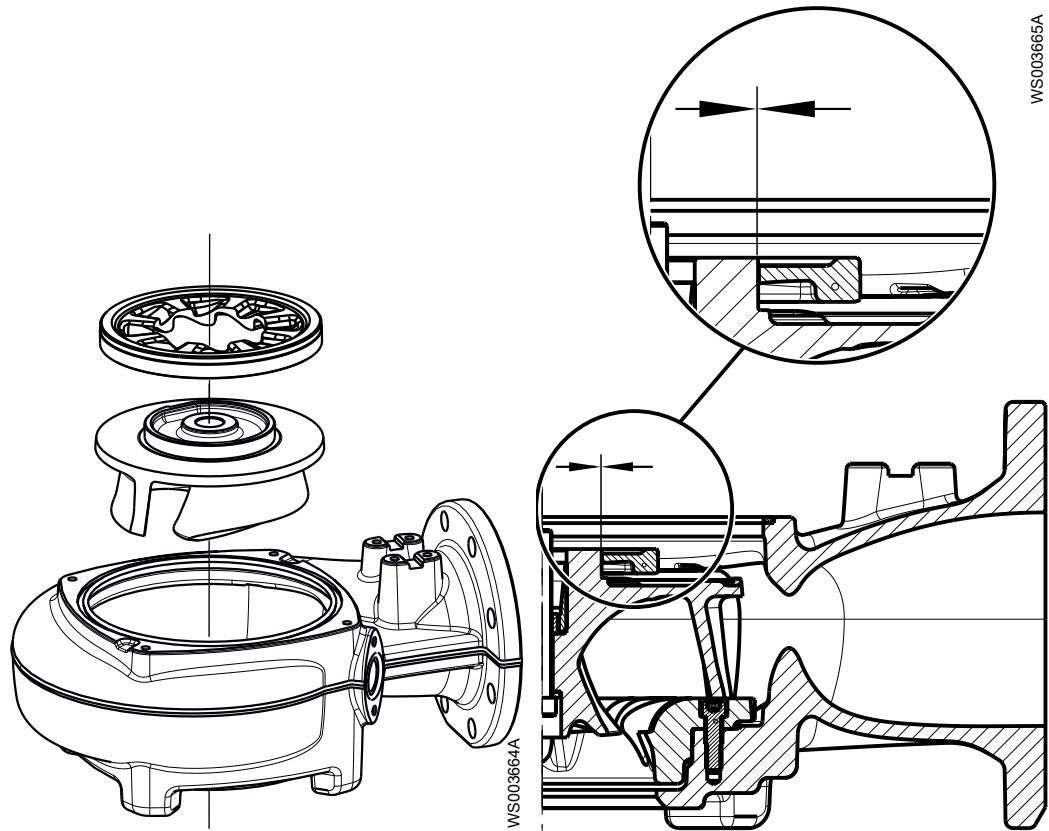

4. Fit the pump housing:


- a) Fit a new and lubricated O-ring on the seal housing cover.
- b) Lubricate the pump housing screws.
- c) Raise the drive unit.
- d) Place the drive unit into the pump housing.
- e) Adjust its position so that the inspection hole is on the same side as the flush valve.
- f) Tighten the screws in diagonal sequence.

For tightening torque, see [Torque values](#) on page 55.

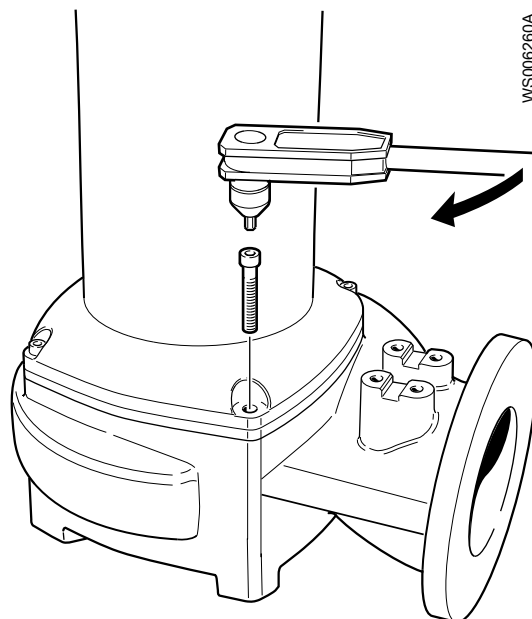


5. Remove the impeller screw:

- a) Place the pump horizontally.
- b) Lock the impeller in place by inserting a rod through the hole.
- c) Remove the impeller screw and the washer.

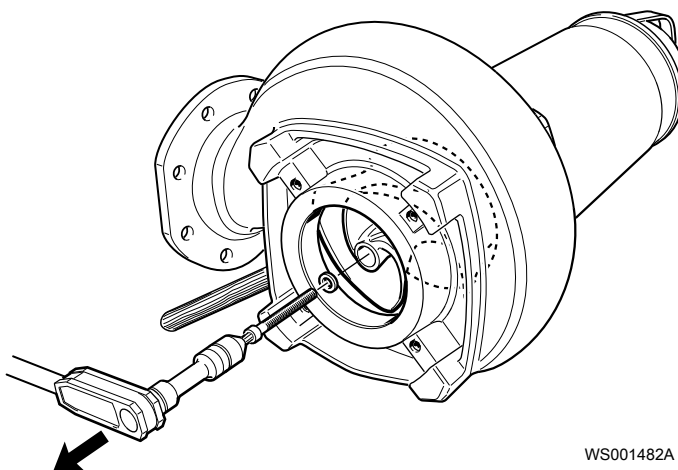


6. Adjust the impeller:

- a) Using a hexagon-bit adapter, turn the adjustment screw clockwise until the impeller makes contact with the pump housing.
For tightening torque, see [Torque values](#) on page 55.
- b) Tighten it a further 1/8 turn (45°).

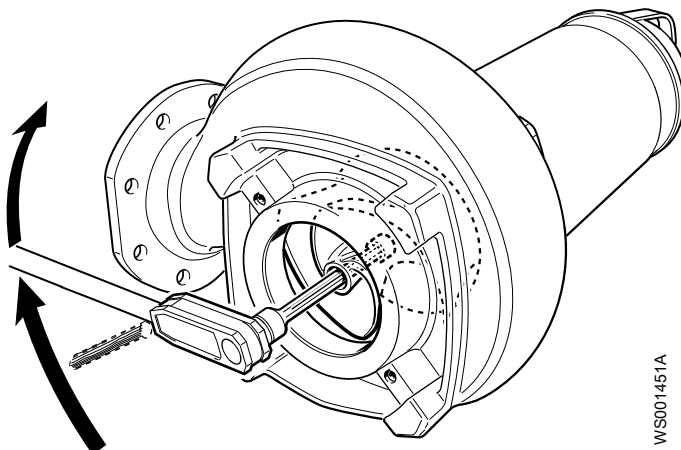

7. Fasten the impeller:

- a) Fit the lubricated washer and impeller screw.
- b) Tighten the impeller screw.
For tightening torque, see [Torque values](#) on page 55.
- c) Tighten it a further 1/8 turn (45°).

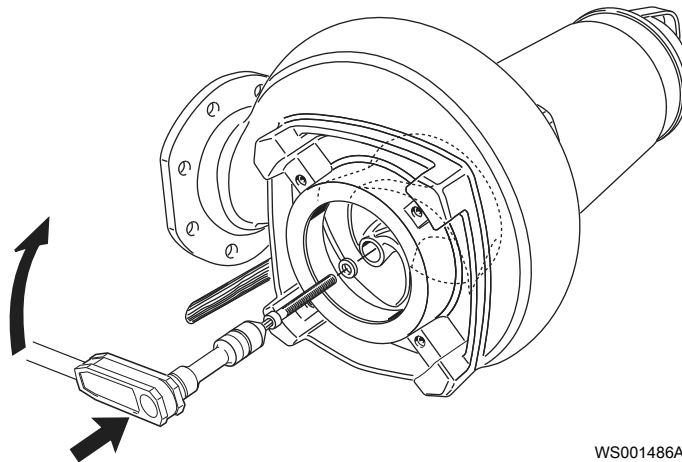


WS001486A

- d) Remove the rod that is used to lock the impeller.
- e) Fit the O-ring and flush valve cover and fasten it with screws.
For tightening torque, see [Torque values](#) on page 55.
- f) Check that the impeller can rotate freely.


**WARNING: Crush Hazard**

Beware of the pinch point hazard between the rotating impeller and the guide pin.

- 8. Check that the clearance between the impeller and the insert ring is 0.1–0.5 mm (0.004–0.02 in).

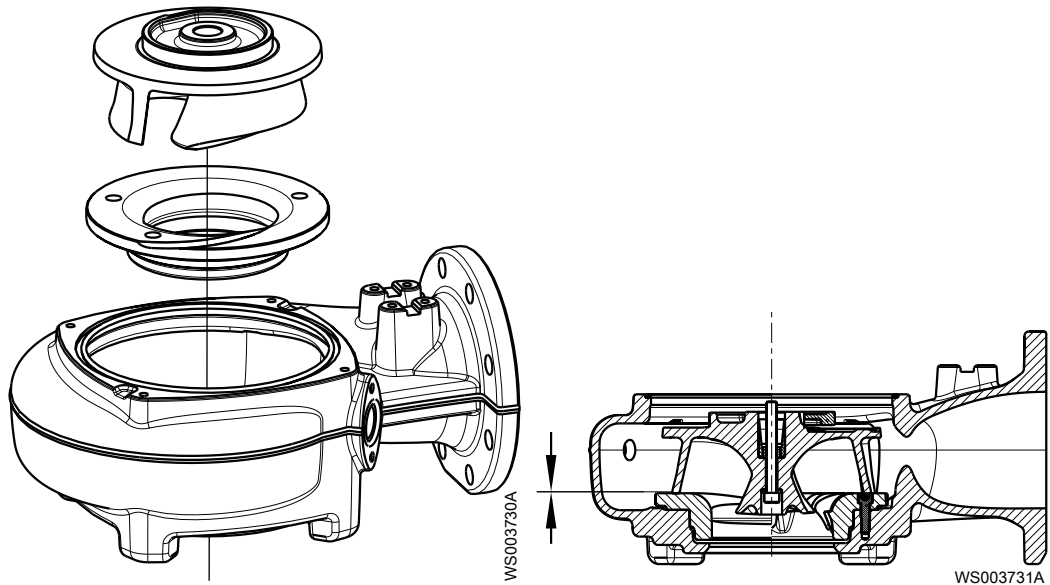


- 9. If applicable, adjust the clearance to 0.1–0.5 mm (0.004–0.02 in) between the guide pin and the impeller.

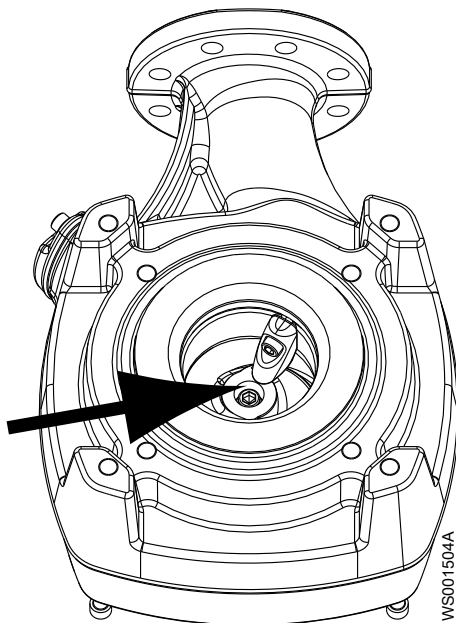


6.6.2 Replace the impeller for dry installation

6.6.2.1 Remove the impeller: dry installation


1. Remove the drive unit from the pump housing:
 - a) Remove the pump housing screws.

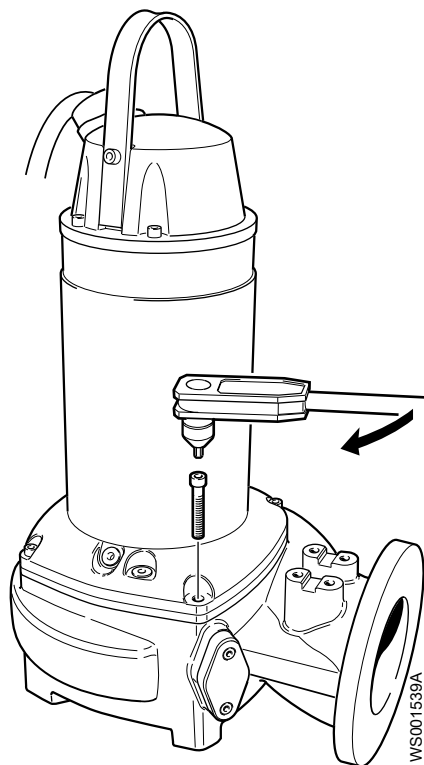


- b) Remove the drive unit from the pump housing.

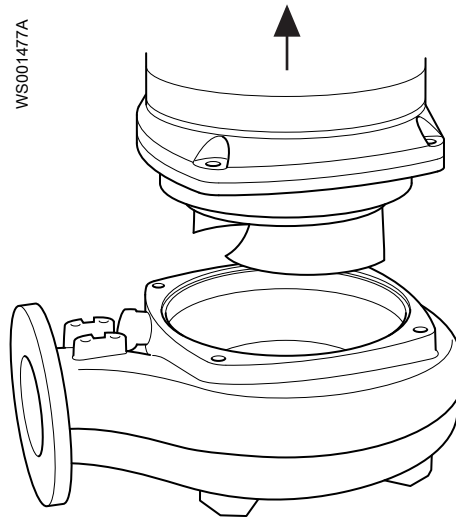

2. Remove the impeller:
 - a) Place the drive unit horizontally.
 - b) Lock the impeller as shown in the figure.
 - c) Remove the impeller screw.

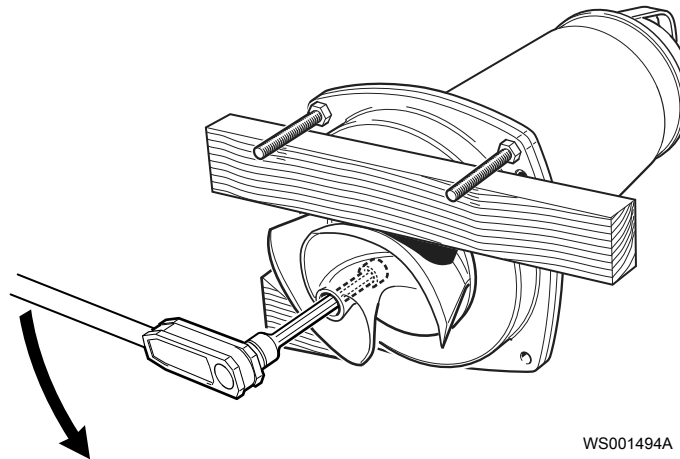

- d) Turn the adjustment screw counterclockwise until the impeller breaks free from the shaft.
 - e) Remove the impeller and the conical sleeve.

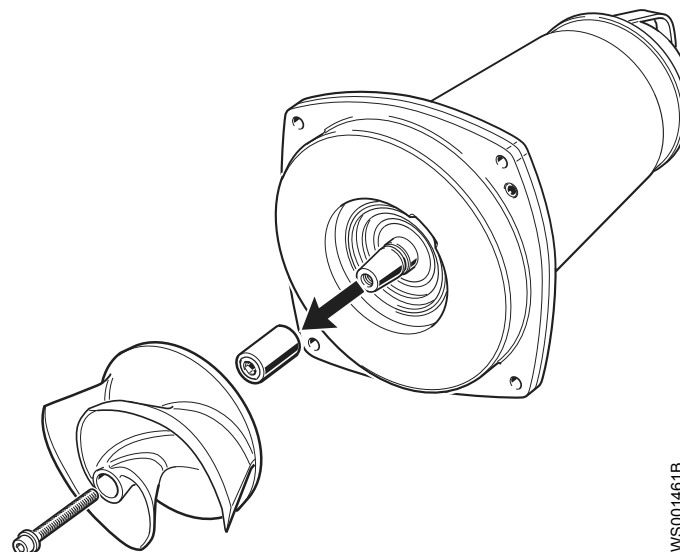

6.6.2.2 Install the impeller: dry installation

1. Prepare the shaft:

- a) Polish off any flaws by using a fine emery cloth.


The end of the shaft must be clean and free from burrs.

- b) Coat the inner conical, the outer cylindrical surfaces, and the thread of the conical sleeve with a thin layer of grease.

The correct lubrication is grease for bearings, for example Exxon Mobil Unirex N3, Mobil Mobilith SHC 220 or equivalent.

NOTICE:

Surplus grease can cause the impeller to become loose. Remove surplus grease from conical and/or cylindrical surfaces of shafts and/or sleeves.

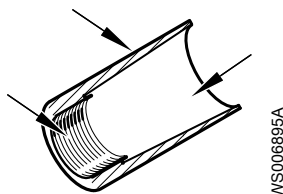

2. Mount the impeller:


- a) Lubricate the threads of the impeller screw and the washer.

Always use a new impeller screw.


- b) Unscrew the adjustment screw approximately 5 mm (0.2 in.).




- c) Measure and note the distance A.

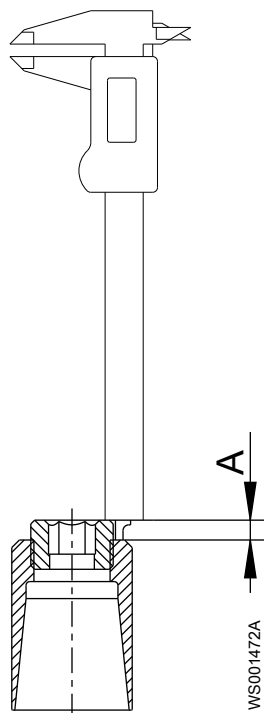


d) Fit the sleeve and the impeller to the shaft.

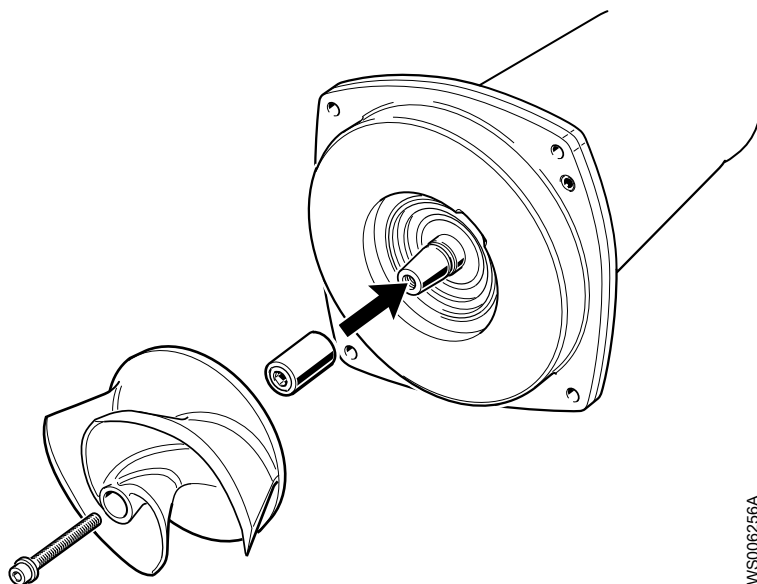

e) Fit the impeller screw and washer and tighten.

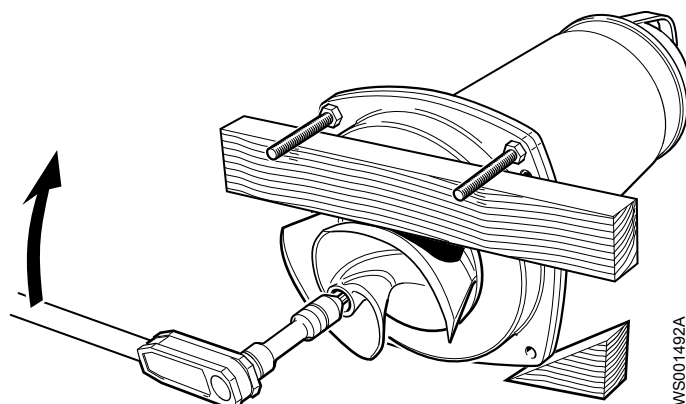


3. Make sure that the O-ring is removed from the seal housing cover.

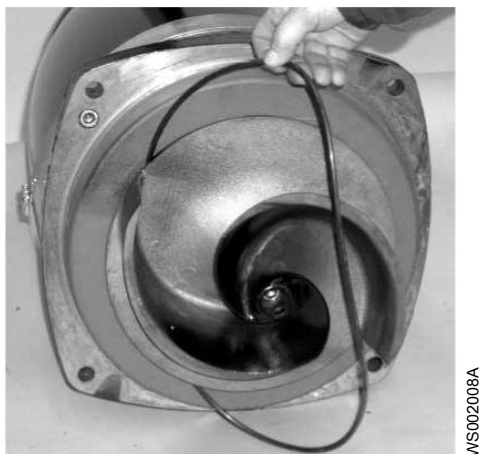

4. Measure the trim distance:

- a) Place the drive unit in the pump housing.

Make sure that the drive unit is parallel with the pump housing by hand-tightening the pump housing screws.

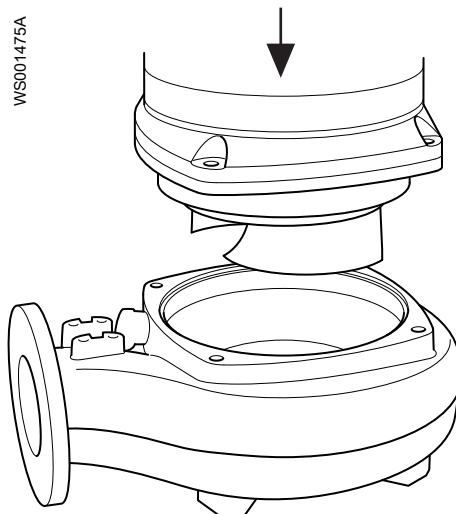


- b) Check the distance between the seal housing cover and the pump housing with a feeler gauge.


Check diagonally at four points.




- c) Note the largest distance B.

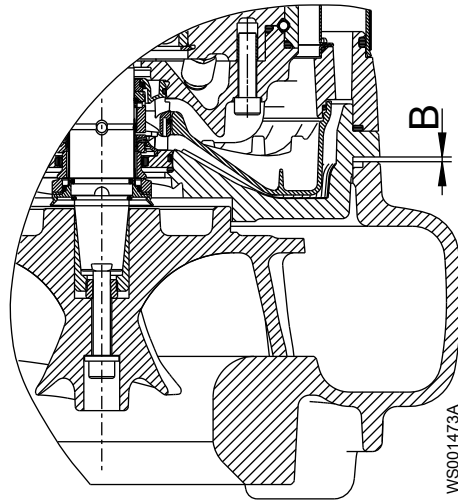


- d) Lift the drive unit out of the pump housing and remove the impeller and conical sleeve.

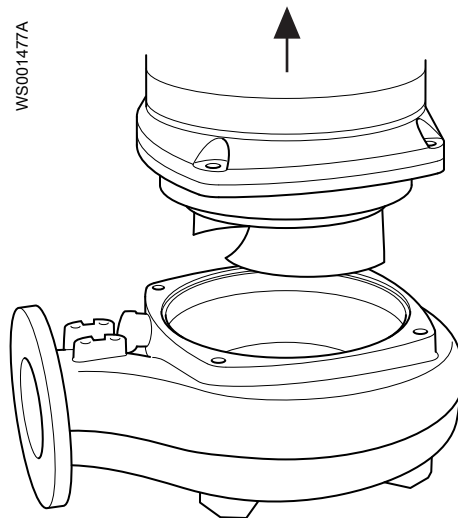


5. Trim to the correct distance:
a) Calculate the measure C according to the formula shown in the image.

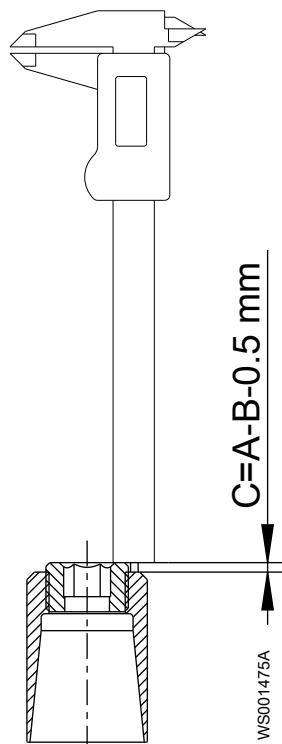


- b) Turn the adjustment screw until C is reached.
- 6. Fasten the impeller:
 - a) Fit the sleeve, impeller, lubricated washer with a lubricated impeller screw.
 - b) Tighten the impeller screw.
For tightening torque, see [Torque values](#) on page 55.
 - c) Tighten it further 1/8 turn (45°).

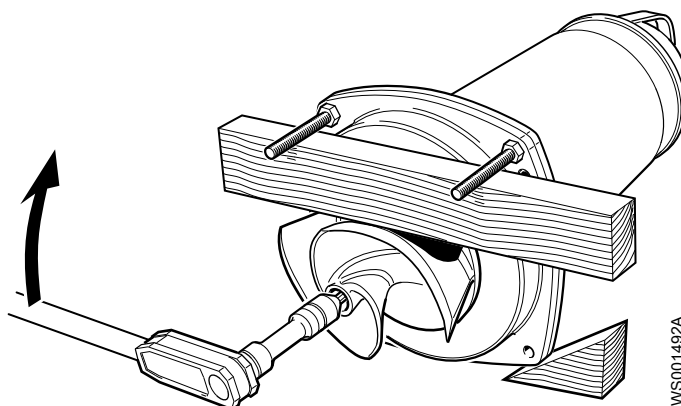

- 7. If applicable, check that the clearance between the impeller and the insert ring is maximum 1 mm (0.04 in.) radial. If not, send the pump for service.
The insert ring is pressed into the seal housing cover.

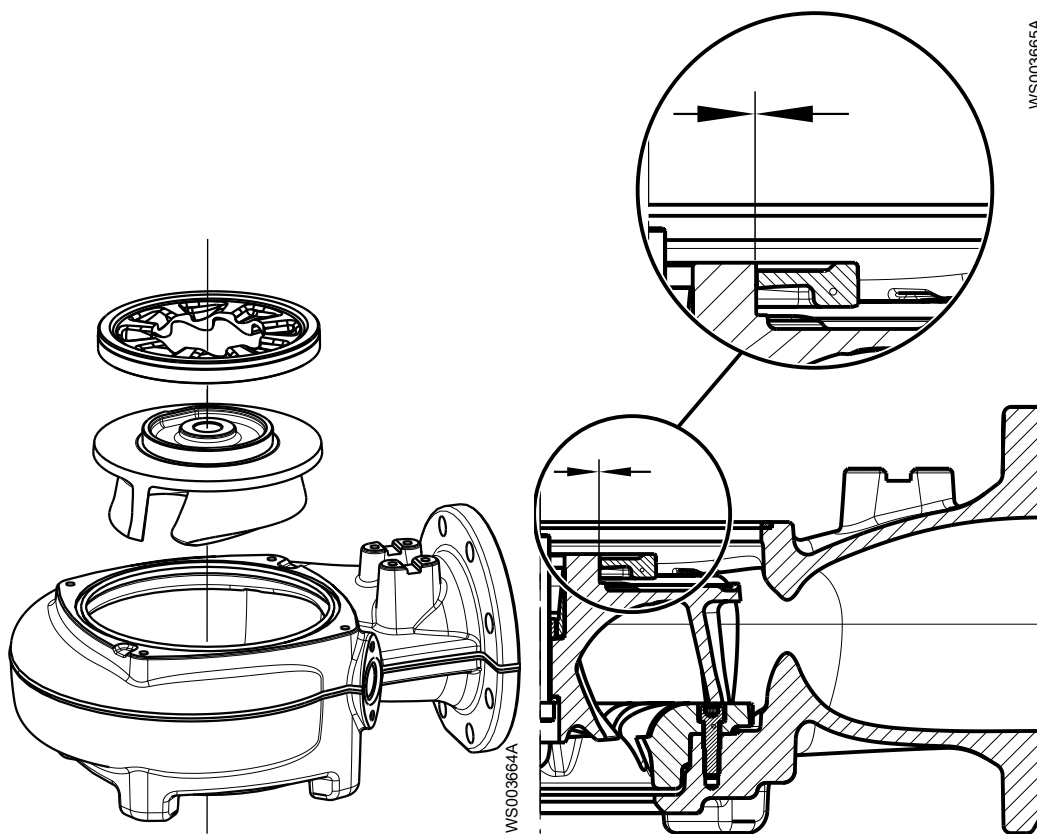


8. Install the drive unit in the pump housing:
- Fit a new and lubricated O-ring to the seal housing cover.

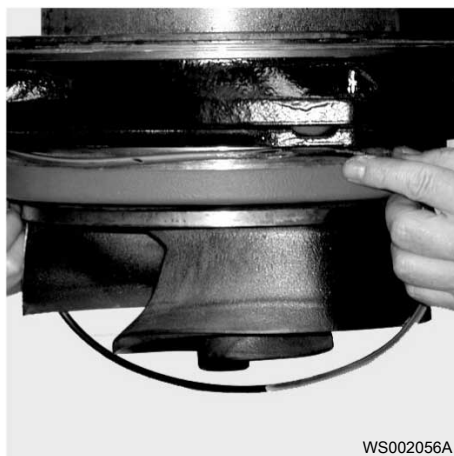


WS002056A

- Place the drive unit in the pump housing.

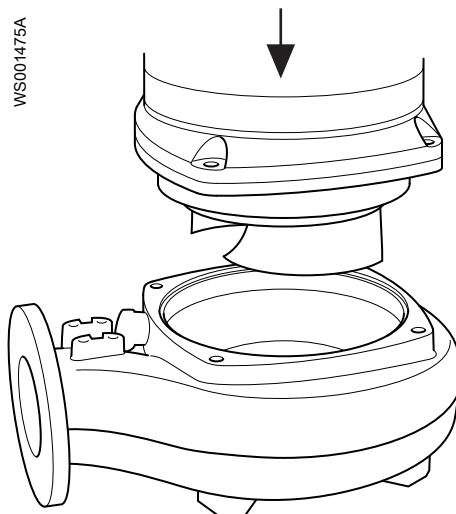


- c) Adjust the position of the drive unit so that the inspection hole is on the same side as the flush valve.
 - d) Tighten the lubricated screws diagonally.
- For tightening torque, see [Torque values](#) on page 55.

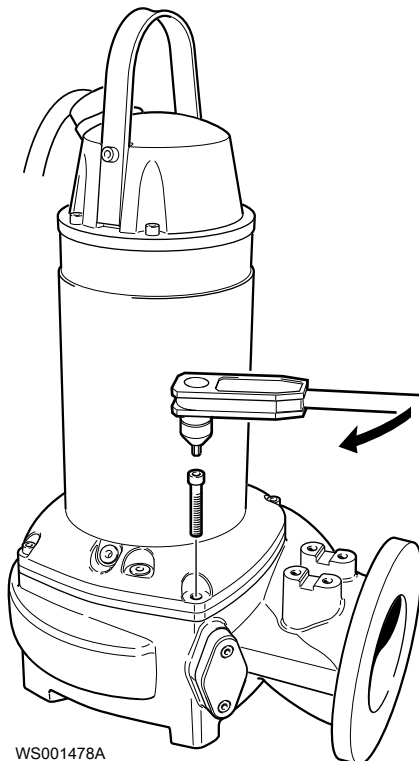


If you need to adjust the impeller, redo the replace the impeller procedure from the beginning.

6.7 Pumps with MAS 801: Replace the PEM

1. Remove the entrance cover and cable leads.
2. To remove the terminal block and rail, follow this procedure:
 - a) Disconnect the remaining leads from the terminal block.

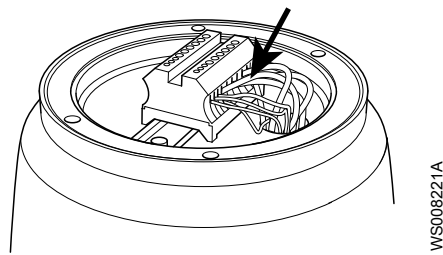

- b) Remove the screws securing the rail under the terminal block and the PEM.
- c) Lift out the terminal block and the rail.

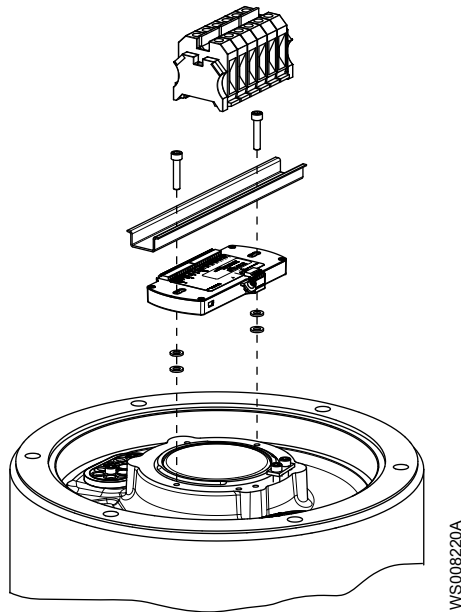

3. To remove the PEM, follow this procedure:
 - a) Disconnect the communication terminals T1 and T2 from the PEM.
 - b) Disconnect the control terminals on the PEM.
For Ex-proof pumps, do not disconnect T3 and T4 from the separate plinth.
 - c) Disconnect the functional ground.
 - d) Lift out the PEM.
4. To install the new PEM, follow this procedure:
 - a) Fit the new PEM into position. Temporarily secure with two screws.
 - b) Connect the functional ground.
 - c) Connect the control terminals.
For Ex-proof pumps, do not use connections 51 and 63 on the PEM. For Ex-proof pumps, T3 and T4 must be connected to the separate plinth.
 - d) Connect the communication terminals T1 and T2.
 - e) Remove the two screws that temporarily secure the PEM.
5. Install the rail and terminal block. Secure with two screws.
6. Reconnect the cable leads to the terminal block.
7. To download information to the PEM, see the System Installation and Operation (SIO) Manual for the MAS 801 monitoring equipment.

7 Troubleshooting

7.1 Electrical troubleshooting

EN



DANGER: Electrical Hazard

Troubleshooting a live control panel exposes personnel to hazardous voltages. Electrical troubleshooting must be done by a qualified electrician.

Follow these guidelines when troubleshooting:

- Disconnect and lock out the power supply except when conducting checks that require voltage.
- Make sure that no one is near the unit when the power supply is reconnected.
- When troubleshooting electrical equipment, use the following:
 - Universal instrument multimeter
 - Test lamp (continuity tester)
 - Wiring diagram

7.2 The pump does not start



DANGER: Crush Hazard

Moving parts can entangle or crush. Always disconnect and lock out power before servicing to prevent unexpected startup. Failure to do so could result in death or serious injury.



WARNING: Electrical Hazard

The permanent-magnet motor generates voltage when the shaft rotates, even if power sources are disconnected. Never perform any electrical work if the shaft could rotate.

NOTICE:

Do NOT override the motor protection repeatedly if it has tripped. Doing so may result in equipment damage.

Cause	Remedy
An alarm signal has been triggered on the control panel.	Check that: • The impeller rotates freely. • The sensor indicators do not indicate an alarm. • The overload protection is not tripped.
The pump does not start automatically, but can be started manually.	Check that: • The start level regulator is functioning. Clean or replace if necessary. • All connections are intact. • The relay and contactor coils are intact. • The control switch (Man/Auto) makes contact in both positions. Check the control circuit and functions.

Cause	Remedy
The installation is not receiving voltage.	Check that: • The main power switch is on. • There is control voltage to the start equipment. • The fuses are intact. • There is voltage in all phases of the supply line. • All fuses have power and that they are securely fastened to the fuse holders. • The overload protection is not tripped. • The motor cable is not damaged.
The impeller is stuck.	Clean: • The impeller • The sump in order to prevent the impeller from clogging again.

If the problem persists, then contact a sales or authorized service representative.

Always state the serial number of the product, see [Product Description](#) on page 10.

7.3 The pump does not stop when a level sensor is used



DANGER: Crush Hazard

Moving parts can entangle or crush. Always disconnect and lock out power before servicing to prevent unexpected startup. Failure to do so could result in death or serious injury.



WARNING: Electrical Hazard

The permanent-magnet motor generates voltage when the shaft rotates, even if power sources are disconnected. Never perform any electrical work if the shaft could rotate.

Cause	Remedy
The pump is unable to empty the sump to the stop level.	Check that: • There are no leaks from the piping and/or discharge connection. • The impeller is not clogged. • The non-return valve(s) are functioning properly. • The pump has adequate capacity. For information: Contact a sales or authorized service representative.
There is a malfunction in the level-sensing equipment.	• Clean the level regulators. • Check the functioning of the level regulators. • Check the contactor and the control circuit. • Replace all defective items.
The stop level is set too low.	Raise the stop level.

If the problem persists, then contact a sales or authorized service representative.

Always state the serial number of the product, see [Product Description](#) on page 10.

7.4 The pump starts-stops-starts in rapid sequence

Cause	Remedy
The pump starts due to back-flow which fills the sump to the start level again.	Check that: • The distance between the start and stop levels is sufficient. • The non-return valve(s) work(s) properly. • The length of the discharge pipe between the pump and the first non-return valve is sufficiently short.
The self-holding function of the contactor malfunctions.	Check: • The contactor connections. • The voltage in the control circuit in relation to the rated voltages on the coil. • The functioning of the stop-level regulator. • Whether the voltage drop in the line at the starting surge causes the contactor's self-holding malfunction.

If the problem persists, then contact a sales or authorized service representative.

Always state the serial number of the product, see [Product Description](#) on page 10.

7.5 The pump runs but the motor protection trips



DANGER: Crush Hazard

Moving parts can entangle or crush. Always disconnect and lock out power before servicing to prevent unexpected startup. Failure to do so could result in death or serious injury.



WARNING: Electrical Hazard

The permanent-magnet motor generates voltage when the shaft rotates, even if power sources are disconnected. Never perform any electrical work if the shaft could rotate.

NOTICE:

Do NOT override the motor protection repeatedly if it has tripped. Doing so may result in equipment damage.

Cause	Remedy
The motor protection is set too low.	Set the motor protection according to the data plate and if applicable the cable chart.
The impeller is difficult to rotate by hand.	• Clean the impeller. • Clean out the wet well. • Check that the impeller is correctly trimmed.
The drive unit cannot receive full voltage on all three phases.	• Check the fuses. Replace fuses that have tripped. • If the fuses are intact, then notify a certified electrician.
The phase currents change, or they are too high.	Contact a sales or authorized service representative.
The insulation between the phases and ground in the stator is defective.	1. Use an insulation tester. Use a 1000 VDC insulation and continuity tester to check that the insulation between the phases, and between any phase and ground, is > 5 megohms. 2. If the insulation is less, then do the following: Contact a sales or authorized service representative.

Cause	Remedy
The density of the pumped fluid is too high.	Make sure that the maximum density is 1100 kg/m ³ (9.2 lb/US gal) • Change the impeller, or • Change to a more applicable pump • Contact a sales or authorized service representative.
There is a malfunction in the overload protection.	Replace the overload protection.

If the problem persists, then contact a sales or authorized service representative.

Always state the serial number of the product, see [Product Description](#) on page 10.

7.6 The pump delivers too little or no water



DANGER: Crush Hazard

Moving parts can entangle or crush. Always disconnect and lock out power before servicing to prevent unexpected startup. Failure to do so could result in death or serious injury.



WARNING: Electrical Hazard

The permanent-magnet motor generates voltage when the shaft rotates, even if power sources are disconnected. Never perform any electrical work if the shaft could rotate.

NOTICE:

Do NOT override the motor protection repeatedly if it has tripped. Doing so may result in equipment damage.

Cause	Remedy
The impeller rotates in the wrong direction.	• If it is a 3-phase pump, then transpose two phase leads. • If it is a 1-phase pump, then do the following: Contact a sales or authorized service representative.
One or more of the valves are set in the wrong positions.	• Reset the valves that are set in the wrong position. • Replace the valves, if necessary. • Check that all valves are correctly installed according to media flow. • Check that all valves open correctly.
The impeller is difficult to rotate by hand.	• Clean the impeller. • Clean out the sump. • Check that the impeller is properly trimmed.
The pipes are obstructed.	To ensure a free flow, clean out the pipes.
The pipes and joints leak.	Find the leaks and seal them.
There are signs of wear on the impeller, pump, and casing.	Replace the worn parts.
The liquid level is too low.	• Check that the level sensor is set correctly. • Depending on the installation type, add a means for priming the pump, such as a foot valve.

If the problem persists, then contact a sales or authorized service representative.

Always state the serial number of the product, see [Product Description](#) on page 10.

8 Technical Reference

8.1 Application limits

EN

Data	Description
Liquid temperature	40°C (104°F) maximum For P-installations without a cooling jacket, the pump can be operated only when the sump level is at least 10 mm (0.4 in) above the stator housing. Warm-liquid version: 70°C (158°F) maximum Warm-liquid version must have cooling jacket.
pH of the pumped media (liquid)	5.5–14
Liquid density	1100 kg/m ³ (9.2 lb for each US gal) maximum
Depth of immersion	Maximum 20 m (65 ft)
Other	For the specific weight, current, voltage, power ratings, and speed of the pump, see the data plate of the pump.

8.2 Motor data

Feature		Description
Motor type	Versions .091, .095, .182, .185, .350, .390, .660, .670	Squirrel-cage induction
	Versions .800, .810, .820, .830, .840, .850, .860, .870	- Squirrel-cage induction - Line-started, permanent-magnet synchronous motor
Frequency		50 Hz or 60 Hz
Supply		3-phase
Starting method		- Direct on-line - Star-delta - Soft starter For more information, see Start the pump on page 53 - Variable frequency drive (VFD)
Maximum starts for each hour		30 evenly spaced starts for each hour
Code compliance		IEC 60034-1
Voltage variation without overheating		±10%, if it does not run continuously at full load
Voltage imbalance tolerance		2%
Stator insulation class		H (180°C [356°F])

Motor encapsulation


Motor encapsulation is in accordance with IP68.

8.3 Sensor characteristics

Sensor	Measured value
Thermal contact	0–3 ohm unless the wires are long The thermal contacts open at 140°C (285°F)

Sensor	Measured value
Thermistor	Resistance at normal temperature: • One thermistor, 50–100 ohm • Three thermistors in series, 150–300 ohm
Pt100	• 100 ohm at 0°C (32°F) • 107.79 ohm at room temperature, 20°C (68°F) • 138.5 ohm at 100°C (212°F) The resistance increases by 0.385 ohm for each °C. NOTICE: Never connect the Pt100 transducer to a voltage higher than 2.5 V.
FLS	• Normal: 1530 ohm • Alarm: 330 ohm
FLS10	• Normal: 1200 ohm • Alarm: 430 ohm
VIS 10	4–20 mA

8.4 Wiring diagram: MiniCAS II

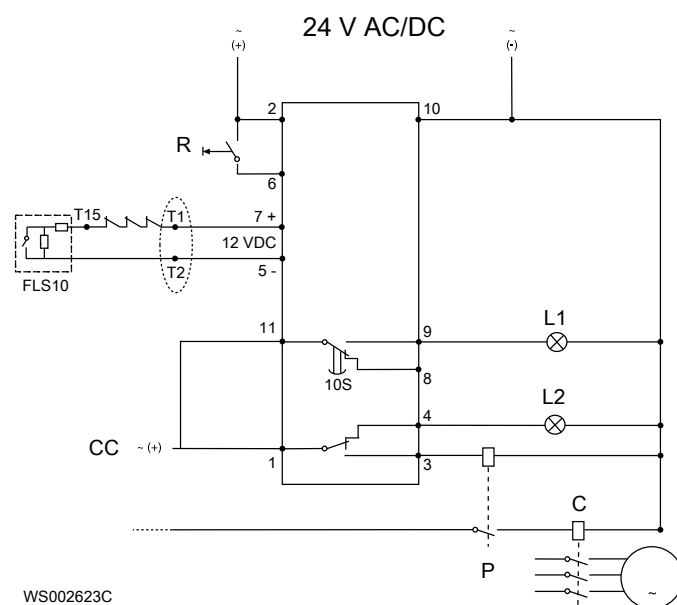

WS002623C

- C Pump contactor
- CC Control circuit
- L1 Caution light
- L2 Caution light
- Stator over-temperature
- P Pump main supply
- R Reset switch

Xylem |'zīləm|

- 1) The tissue in plants that brings water upward from the roots;
- 2) a leading global water technology company.

We're a global team unified in a common purpose: creating advanced technology solutions to the world's water challenges. Developing new technologies that will improve the way water is used, conserved, and re-used in the future is central to our work. Our products and services move, treat, analyze, monitor and return water to the environment, in public utility, industrial, residential and commercial building services settings. Xylem also provides a leading portfolio of smart metering, network technologies and advanced analytics solutions for water, electric and gas utilities. In more than 150 countries, we have strong, long-standing relationships with customers who know us for our powerful combination of leading product brands and applications expertise with a strong focus on developing comprehensive, sustainable solutions.

For more information on how Xylem can help you, go to www.xylem.com



Xylem Water Solutions Global
Services AB 556782-9253
361 80 Emmaboda
Sweden
Tel: +46-471-24 70 00
Fax: +46-471-24 74 01
<https://tpi.xylem.com>

Visit our Web site for the latest version of this document and more information
The original instruction is in English. All non-English instructions are translations of the original instruction.
© 2019 Xylem Inc.
Flygt is a trademark of Xylem Inc. or one of its subsidiaries. All other trademarks or registered trademarks are property of their respective owners.